

Genuine Parts

MAINTENANCE INSTRUCTIONS

1) **DESCRIPTION:** Alloy Wheel $-19 \times 8.5 \text{J}$ (50)

2) APPLICATION: Q50

3) PART NUMBER: 999W1 J2019

4) SPECIAL INSTRUCTIONS / NOTES:

M WARNING

- At the time of initial installation, always replace each TPMS air valve grommet with a new part. Use the following P/N available from your Infiniti dealer: 40702 3AN0A TPMS unit. A total of four (4) grommets will need to be obtained for a full vehicle set.
- Service lug nut 40224 JK00A must be used for this accessory wheel.
- After installation, check for tire clearance and interference between the body and/or suspension parts. Do not drive the vehicle if interference is found. Tire interference could cause tire failure and lead to an accident and serious injury.
- Failure to apply the proper torque to the lug nuts could cause wheel separation and lead to an accident and serious injury. Re-torque lug nuts to the specified value after 25 miles of driving.
- Use only the recommended tire size, P245/40R19 for this alloy wheel.
- See the tire and loading information label (tire placard) for the recommended COLD tire air pressure.
- The Original Equipment TPMS air valves should be used on the new accessory wheels. If replacement parts are needed, please obtain the following part numbers:

Center cap P/N 40343 1VW5A; TPMS air valve P/N 40700 4GA0A with air valve nut P/N 40780 JA01B.

- For additional tire information, see owner's manual.
- Balance the alloy wheel and tire assembly.
- Place these maintenance instructions in the glove compartment.

5) REGULAR CLEANING:

- To maintain the original appearance, always wash the wheels when washing the vehicle. Typical road deposits can be corrosive and can harm the finish over time. Road film, brake dust and other surface contaminants should be removed on a regular basis.
- Do not clean hot wheels.

6) USE OF PROPER CLEANING AGENTS AND TOOLS:

- Use a mild soap and water to clean wheels. Do not use abrasive cleaners.
- Do not use cleaning agents that contain acids that will permanently stain wheels.
- A mild degreaser may be used for stubborn stains, but should be removed with water immediately following cleaning process.
- Do not use scouring pads, steel wool, or metal brushes that can scratch or damage your wheel's finish. Use a damp soft cloth, sponge, soft brush, or spoke brush.
- For additional protection, apply a coat of non-abrasive cream wax on wheels, once your wheels are clean. The wax is not only to enhance the reflectivity, but also to add a protective film to the wheel to reduce future cleaning effort.