


GENUINE PARTS

INSTALLATION INSTRUCTIONS

DESCRIPTION:	Wheel Lock Kit
APPLICATION:	QX30
PART NUMBER:	T99W2 5DC0A

KIT CONTENTS:

Item	Qty.	Part Description	Service Part Number
Α	4	Wheel Lock Bolt	
В	1	Wheel Lock Key	
С	1	Storage Bag	
D	1	Lock ID Card	
Е	1	Replacement Order Form	
F	1	Envelope	
G	1	Installation Instruction Replacement Template	

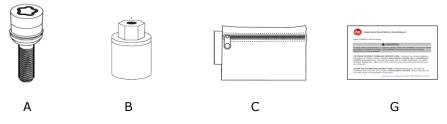

TOOLS REQUIRED:

- Torque Wrench
- Lug Wrench
- Wire Brush
- 17 mm Socket

PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:


• Dealer installation recommended. Instructions may refer to Service or Owner's Manual.

WARNING

- Do not use lubricants or anti-seize compounds on the threads. Lubricants and anti-seizing compounds can cause torque readings to be lower than the actual value and lead to over-torquing which can lead to wheel lock bolt failure.
- Failure to clean the wheel lock mounting surface properly can create a soft joint and cause the wheel system to fail.
- Use of an impact wrench may cause permanent damage to lock and key. If in doubt about lock application, ask your dealer for assistance.
- Please ensure that the wheel lock bolts are torqued to the value specified in the vehicle's owner's manual. Reconfirm the torque periodically after driving.

INSTALLATION PROCEDURE:

- 1) Remove one lug bolt from each wheel. If mounting area is dirty, clean with a wire brush prior to installing locks.
- 2) By hand, install a wheel lock on each wheel.
- 3) Take the special key supplied in the wheel lock set and place it on top of the wheel lock, turning until the key and wheel lock patterns engage.
- 4) Place the lug wrench on the key, and while applying pressure on the key tighten the wheel lock to the recommended torque specifications found in the owners manual. For best results use a torque wrench for final tightening.

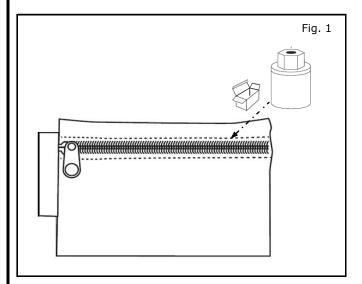

KEY STORAGE:

5) To ensure your key is available when needed, store the key in the nylon storage pouch and keep it in the vehicle. Place the ID card, order form and envelope with the vehicle owners manual.

REMOVAL:

- 6) Use the special key and your lug wrench. Place the key on top of the wheel lock and turn until the pattern of the key and wheel lock bolt engage.
- 7) Place the lug wrench on the key, and while applying pressure on the key, loosen the wheel lock bolt.
- 8) To reinstall, see installation procedure above.