

GENUINE PARTS

INSTALLATION INSTRUCTIONS

1	DESCRIPTION:	Remote Engine Start
2	APPLICATION:	MY19.5 QX60
3	PART NUMBER(S)	999K1 R7000 (Remote Engine Start Kit)
	REQUIRED FOR	
	INSTALLATION:	

4 KIT CONTENTS:

Item	Qty.	Part Description	Service Part Number
Α	2	RES Key Fob	285E3 9NR5A
В	1	II Replacement Template	999V2 AW000

Α



B Important: Read Before In:

allation Recommended.

To avoid serious personal injury or property damage, obtain the Installation Instructions before attempting to install this accessory. The Installation Instructions provide the necessary procedures for a sef installation.

CUSTOMER INTERNET DOWNLOAD INSTRUCTIONS: Customers can obtain Installatior Instructions for Infinit or Nissan vehicles at tww.Infinit1-rechinfo.com or www.Nissan-Techinfo.com respectively. From the home page, select Accessory Instructions. Select your Model, Model Yeer, and Accessory Type or search for your Model, and or Model Year, and or Accessory Type including Keyword or Part Number, then locate the Instructions for your accessory.

DEALER ASIST DOWNLOAD INSTRUCTIONS: Dealership technicians can locate the Installation Instructions for this accessory by scrolling to and select 'Acc. Install Instructions' tab. Always download and use latest version of the Installation Instructions.

Installation Instructions Replacement Template 999V2 AW000 Rev. 06/05/12

5 TOOLS REQUIRED:

• CONSULT III plus

• Approved access to Immobilizer PIN

6 PRE-INSTALLATION CAUTION/NOTES:



- This is a <u>ONE TIME ONLY</u> programming procedure. Be sure to acquire ALL existing Non-RES key fobs from customer and new RES key fobs before proceeding.
- Please read these instructions carefully before beginning to ensure correct installation.
- Dealer Installation Only
- Specialty tools are required.

7 CRITICAL STEPS:

The following steps are critical and must be performed as specified to ensure proper installation:

- This accessory must only be installed as specified in these instructions.
- Do Not place key fob(s) on top of dashboard during programming. Frequency interference may occur.
- Be sure to avoid any other sources of frequency interference such as walkie-talkies, radios, etc.
- Be sure that vehicle is out of transit mode (shipping mode) by pushing in extended storage switch.
- Vehicle battery must be at or above 12.5 VDC.

INSTALLATION INSTRUCTIONS

8 - Vehicle Preperation:


A CAUTION

 
• Always confirm the ignition is in the "OFF" position before changing the switch condition.

- 1) Apply parking brake
- 2) Confirm vehicle is not in the default shipping state or "Inventory position" as shown below. Failure to confirm vehicle has been removed from this state will result in loss of normal vehicle operation.
- 3) Locate Extended Storage Switch in cabin fuse block. Confirm it is in the "Customer" position. See below for reference.
- a) To remove transit mode (Fuse Block):
 - 1. Remove fuse cover lid.
 - 2. Push down shorting pin.
 - 3. Ign On 2 times without starting the vehicle.

- b) To remove transit mode (BCM):
 - 1. Confirm ignition switch is in "OFF" position.
 - 2. Simultaneously push the signal and wiper switch fully down for two (2) seconds.

NOTE: While in BCM Transit Mode, turn signal indicators will remain illuminated for one minute.

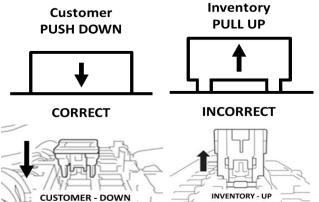



- c) To return to transit mode for storage:
 - 1. Ign Off.
 - 2. Remove fuse cover lid.
 - 3. Pull up shorting pin.
 - 4. Assemble fuse cover lid.
 - 5. Ign On 2 times without turn the vehicle on.
 - 6. Confirm transit mode condition on meter

NOTE: Typical vehicle condition shown above. Switch is easily identifiable by the permanent, push-pull fuse holder. Actual position on the fuse block may vary, vehicle to vehicle.

Condition	Switch Position	Note
Vehicle is delivered to dealer	Inventory Condition	
Technician performs PDI	Customer Delivery	Return to Inventory position after PDI.
Customer test drives vehicle	Customer Delivery	Return to Inventory position after test drive.
Vehicle is being stored at dealer	Inventory Condition	
Vehicle is delivered to customer	Customer Delivery	

- 4) Turn ignition switch to "ON" position
- 5) Record the customer radio presets and other presets as required.

Preset	1	2	3	4	5	6	

- 6) Put shift lever in "P" position for A/T and CVT or "1st" for M/T
- 7) Turn ignition switch to "OFF" position
- 8) Use seat and floor protection.

INSTALLATION INSTRUCTIONS

9 - Vehicle Preperation:

- a.) Locate OBD connector.
- b.) Connect tool.
- c.) Follow CONSULT III plus programming instructions.
- d.) Verify RES operation.


10 - Installation Procedure: Cautions / Notes


CAUTION

- Do not allow the Intelligent Key, which contains electrical components, to come into contact with water. This could severely affect system function. If the Intelligent Key gets wet, immediately wipe moisture from I-Key until completely dry.
- Do not drop the Intelligent Key.
- Do not strike the Intelligent Key sharply against another object.
- Do not change or modify the Intelligent Key.
- Do not place the Intelligent Key in an area where temperatures exceed 140°F (60°C) for any extended period of time.
- Do not attach the Intelligent Key with a key holder that contains a magnet.
- Take care not to scratch or damage any component during the installation process.
- Always follow the sequence of steps as they are shown, improper procedure can damage parts and/or systems.
- Be sure <u>All</u> key fobs for this vehicle have been acquired before proceeding.
- Avoid All other sources of frequency interference such as cell phones, walkie-talkies, radios, etc...
- Do not stop or disconnect CONSULT III plus or VI until after the process has been completed.
- Dispose of old (original) key fobs once the RES installation process has been completed. <u>DO NOT</u> use fobs again and DO NOT return to customer.

11 - Installation Overview

1.) SYSTEM

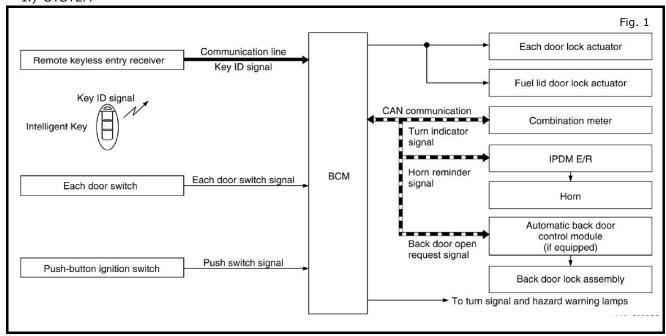


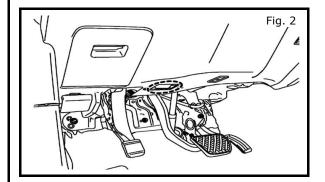


- 1) Locating the connector.
 - a) Locate OBD Connector under steering finisher as shown in Fig. 2.

A CAUTION


 <u>Do Not</u> place key fob(s) on top of dashboard during programming. Frequency interference may occur.

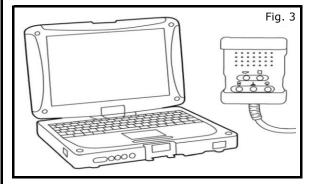


- 2) Connecting to the vehicle.
 - a) Press and hold Start Button for at least
 2 seconds without depressing brake to put
 vehicle in Key On / Engine Off.
 - b) Connect CONSULT III plus tool to vehicle OBD connector as shown in Fig. 3.
 - Turn on hazard switch to prevent BCM from entering into CAN communication sleep mode.

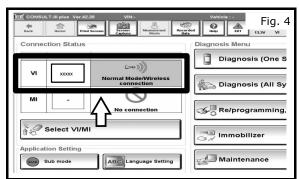


- 3) RES key fobs programming instructions.
 - a) Start CONSULT III plus make sure VI is connected. VI serial number will appear in VI section and the VI status will change to "Normal Mode" (green color) as shown in Fig. 4.
 - b) If VI is connected to vehicle go to step 8 and continue the installation. If VI is not connected to vehicle proceed to step 4.

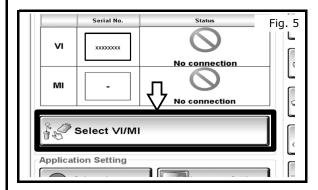


- 4) RES key fobs programming instructions.
 - a) If VI has not connected to vehicle click Select VI/MI button to connect with vehicle as shown in Fig. 5.

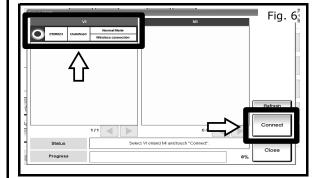


- 5) RES key fobs programming instructions.
 - a) Choose VI-2 detected as shown in Fig. 6.
 - b) Click "Connect" as shown in Fig. 6.

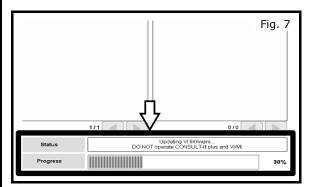


- 6) RES key fobs programming instructions.
 - a) Wait until update of VI-2 firmware is completed as shown in Fig. 7.

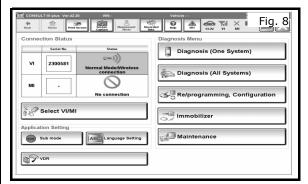


- 7) RES key fobs programming instructions.
 - a) CONSULT III plus will change to a home screen automatically when procedure is complete and VI-2 is connected on Bluetooth as shown in Fig. 8.
 - b) Proceed to step 8 and continue with installation.

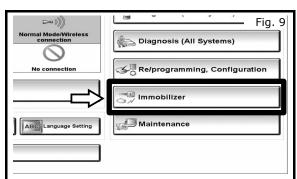


- 8) RES key fobs programming instructions.
 - a) Click "Immobilizer" as shown in Fig. 9.

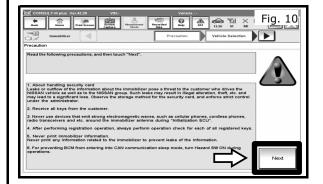


- 9) RES key fobs programming instructions.
 - a) A precaution screen will appear.
 - b) After you have finished reading all precautions, click "Next" as shown in Fig. 10.

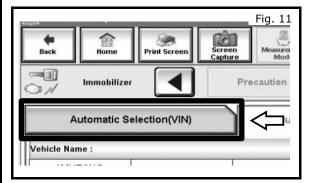


- 10) RES key fobs programming instructions.
 - a) Click "Automatic Selection" as shown in Fig. 11.

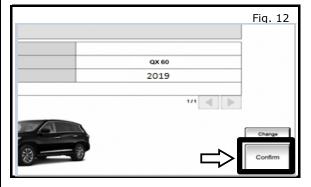


- 11) RES key fobs programming instructions.
 - Review the information on confirmation screen, if correct press click "Confirm" as shown in Fig. 12.

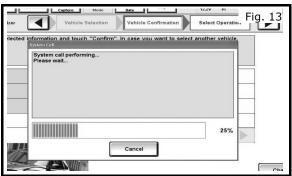

- 12) RES key fobs programming instructions.
 - a) Once you click "Confirm" you will see system call menu as shown in Fig. 13.

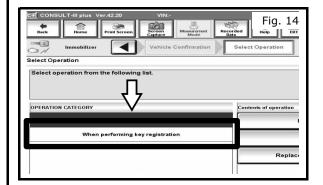

- 13) RES key fobs programming instructions.
 - a) Once the system call is complete, you will enter the Select Operation screen will as shown in Fig. 14.
 - Under OPERATION CATEGORY menu click "When performing key registration" as shown in Fig. 14.

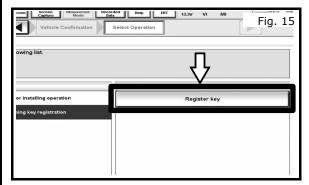


- 14) RES key fobs programming instructions.
 - a) Once you click "When performing key registration" a new Contents of Operation selection "Register Key" will be available as shown in Fig. 15.
 - b) Under Contents of Operation selection click "Register Key" as shown in Fig. 15.




- 15) RES key fobs programming instructions.
 - Follow the CONSULT III plus prompts as shown in Fig. 16





 <u>Do Not</u> procede to Step 16 until the key registery process has been completed.

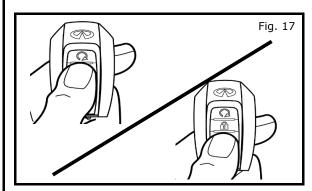


- 16) New RES key fob confirmation.
 - a) From inside vehicle press Lock on Fob 1 and Unlock on Fob 2 and confirm that vehicle responds accordingly as shown Fig. 17.
 - From inside vehicle press Lock on Fob 2 and Unlock on Fob 1 and confirm that vehicle responds accordingly as shown Fig. 17.

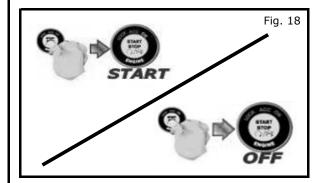

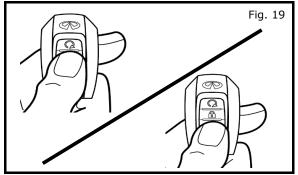

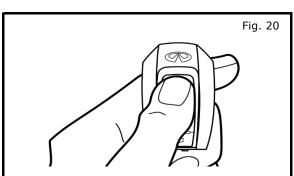


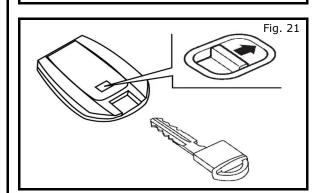


- 17) New RES key fob confirmation.
 - a) Press and hold push button Ignition switch while depressing brake, to confirm vehicle starts as shown in Fig. 18.
 - Press push button Ignition switch and turn ignition switch to OFF position as shown in Fig. 18.

A CAUTION


- Remove all Key Fobs from the vehicle, before proceeding to the next step..
- 18) New RES key fob confirmation.
 - a) From outside vehicle press Lock on Fob 1 and Unlock on Fob 2 and confirm that vehicle responds accordingly as shown Fig. 19.
 - b) From outside vehicle press Lock on Fob 2 and Unlock on Fob 1 and confirm that vehicle responds accordingly as shown Fig. 19.
- 19) New RES key fob confirmation.
 - a) Press and hold the RES button within five (5) seconds of pressing the LOCK button until the turn signal lights turn ON, then release to confirm vehicle starts as shown in Fig. 20.
 - Press and release RES button a second time to stop vehicle.
 - Lock vehicle and repeat sequence with second RES Key fob.
- 20) Disposing of original key fobs.
 - Before disposing of old fobs remove key by turning the fob over and sliding button to right as shown in Fig. 21.

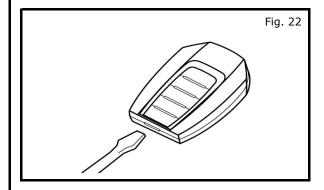

- 21) Disposing of old key fobs.
 - a) Insert a small flat blade screw into bottom of old fob and gently pry apart as shown in Fig. 22.

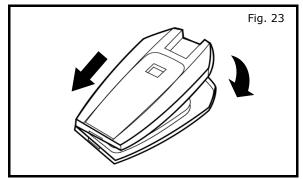


- 22) Disposing of old key fobs.
 - a) Separate front and back halves as shown in Fig. 23.
 - b) Remove battery from back half of Key fob.

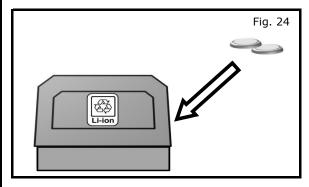

- 23) Disposing of old key fobs.
 - a) Dispose of batteries appropriately as shown in Fig. 24.

A CAUTION


 Dispose of batteries in a proper recycling receptacle, not a trash can.

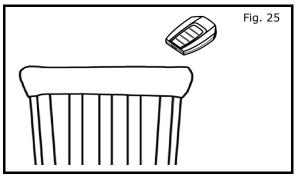

- 24) Disposing of old key fobs.
 - a) Dispose of key fobs in a proper recepticle as shown in Fig. 25.

A CAUTION

 Be sure the batteries have been removed from <u>All</u> old key fobs before disposing of them.

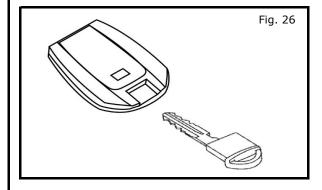

- 25) Disposing of old key fobs.
 - a) Insert keys into the new RES fobs as shown in Fig. 26.

13 - Final Inspection **A** CAUTION • Refer to the vehicle service manual for more information. Verify interior and exterior is not damaged. Turn ignition switch to the "ON" position to confirm proper operation of vehicle systems. That there are no new Diagnostic Trouble Codes. Verify all windows and sunroof (if equipped), check one touch operation and perform reset procedure if necessary. Refer to vehicle service manual for more details. Verify Power Back Door one touch operation and perform the reset procedure if necessary. Refer to the vehicle service manual for more details. Tail Lamp - Turn on headlamps; open glove box and note whether light goes on. Confirm proper audio function (AM, FM, SAT, CD and AUX). Re-program radio presets and other vehicle settings to the recorded settings if necessary. Confirm RES function. Turn IGN ON. Turn IGN OFF. Get out of the vehicle and close <u>all</u> doors (make sure the hood is closed). Lock the vehicle with the remote. Within 5 seconds, press and hold the RES button for more than 2 seconds. Engine should start. Front Sonar Module Connector - Turn on vehicle, put vehicle in 'Drive'. Move slowly towards a large object in front of the vehicle. Note whether alarm sounds. Rear Sonar Module Connector - Turn on vehicle, put vehicle in 'Reverse'. Move slowly towards a large object behind the vehicle. Note whether alarm sounds. Place the Owner Manual, Quick Reference Guide, and/or other Manual in the glove box. If this vehicle will be returned to a dealer lot or showroom for an extended period of time, be sure the extended storage switch is placed in the "inventory" position.

14 - Troubleshooting: Diagnosis

Operate RES, verify if the system is not working properly:

- a. Start the engine normally with the push-button ignition switch.
- b. Turn the ignition OFF, and then wait six (6) seconds.
- Exit the vehicle, make sure all doors are closed, and then lock the vehicle with the key fob.
- d. Within five (5) seconds of pressing the lock button, point the key fob at the vehicle, and then press and hold the RES button until the turn signal lights turn ON.
- e. At this time, the engine should start, the turn signal lights remain ON, and the doors should remain locked while the engine is running.
- f. If this condition does not occur, use the Supplemental Diagnosis Table below in addition to the ESM.

Supplemental Diagnosis Table

		Possible Cause	Confirmation of Cause	Resolution
	1	ECM has not completed shutdown procedure after engine/ignition OFF.	ECM has to end shutdown process and save data prior to allowing RES to operate. Shutdown process takes 6 seconds to complete after engine/ignition is turned OFF.	Wait 6 seconds after engine has stopped prior to attempting RES activation.
The engine does not start using the RES feature	2	RES is correctly activated more than 2 times consecutively OR RES is activated once and with engine running another request is generated.	Not possible to confirm how many times RES has been activated.	Perform steps a-d above. This action will reset counter.
(see steps a-e above)	3	One or more key fobs for this vehicle are still inside the vehicle.	With all known key fobs outside and out of range of vehicle, try to turn ON ignition with push-button ignition switch. If ignition turns ON, a key fob/I-Key remains inside vehicle.	Find and remove all remaining key fobs from the vehicle, lock doors with key fob, and then perform RES.
	4	Doors and trunk lid (or lift gate) are not closed and locked.	Doors/trunk lid/lift gate may not be completely closed and locked. Confirm both conditions in BCM Data Monitor: All doors closed - Status SW = ON All doors locked - Status = ON	Close and lock all doors/trunk lid/lift gate. If switches still do not show correct status, diagnose further with ESM.

15 - Troubleshooting: Diagnosis

		Possible Cause	Confirmation of Cause	Resolution
The engine does not start using the RES feature	5	Door Lock button on key fob was not pressed prior to activating RES.	Not possible to confirm lock button was pressed first.	Press the Lock button before pressing and holding the RES button
	6	RES button on key fob is not held long enough.	Not possible to confirm how long RES button was held.	Hold RES button for more than 2 sec to activate RES.
	7	Waited longer than 5 seconds to activate RES after door lock operation.	Not possible to confirm how long RES was pressed after lock.	Press and hold RES button within 5 seconds of pressing lock button
	8	Ignition switch is not in LOCKED position	Verify if ignition switch position (status) is in any status other than LOCKED.	Change ignition switch to LOCKED status.
	9	Shift selector may look to be in Park but is not. The vehicle's shift selector is not in Park position. Shift selector may look to be in Park but is not. Confirm in BCM Data Monitor: PN Switch = ON (with shift selector in Park)		Verify shift selector is in Park position. If PN switch = OFF, diagnose further with ESM.
	10	Shift selector release button is not in released (unpressed) position.	Confirm in BCM Data Monitor: Detent SW = OFF (when release button is not pressed)	If Detent SW = ON, diagnose further with ESM.
	11	Environmental factors block, reduce, or scramble signal strength from key fob to BCM.	reduce, or other devices found near an an ignal strength the key i.e. highway	
	12	Stop lamp switch is misadjusted or inoperative, giving a stop lamp switch ON signal (or brake pedal is applied).	Stop lamp switch adjustment may not be within specification. Confirm switch operation using ABS Data Monitor: Stop Lamp SW = OFF (with brake pedal released, not pressed)	Adjust / Replace Stop lamp switch.

16 - Troubleshooting: Diagnosis

Supplemental Diagnosis Table (cont'd) Confirmation Possible Cause Resolution of Cause Check as needed: Hood may not be · Verify the hood is completely closed. closed. Confirm hood switch · Confirm hood switch 13 Hood is opened. operation using connection is IPDM Data Monitor: secure. SW = ON· Adjust / replace (when hood is closed) switch. Security system is Check Security system Turn off/deactivate currently activated activation by trying to start The engine does Security system engine normally (with push-(activation keeps (unlock doors with not start using engine from starting). button ignition switch). 14 key fob). If condition the RES feature Note: Horns may not Note: Engine will not start persists, diagnose be heard and lights with Security system further using ESM. may not be flashing. activated. Exit vehicle WITH RES can only operate RES is attempted from key fob, lock doors 15 from outside vehicle and within 5 seconds within the vehicle. with doors locked.

Confirm with C-III plus

no DTCs are stored.

Specific DTCs may

prevent RES from

operating: B261B,

B26FE, B26FD

16

activate RES.
Clear DTC(s)

with C-III plus.

If DTC(s) persist,

perform further

diagnosis using ESM.

17 - Bill of Materials

999K1 R7000 Remote Engine Starter Kit

Item	Qty.	Part Description	Service Part Number
Α	2	RES Key Fob	285E3 9NR5A
В	1	II Replacement Template	999V2 AW000

18 - Mechanization

REMOTE ENGINE START FUNCTION: System Description

