




GENUINE PARTS

INSTALLATION INSTRUCTIONS

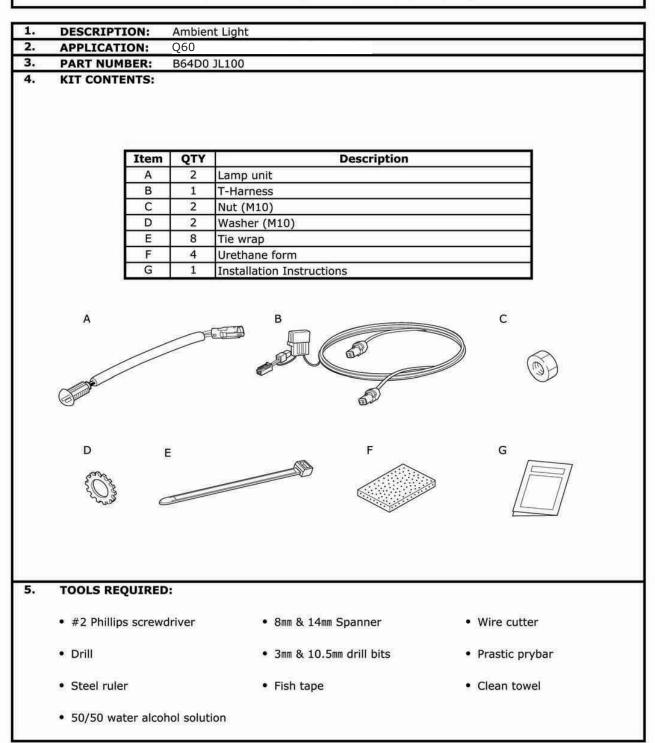


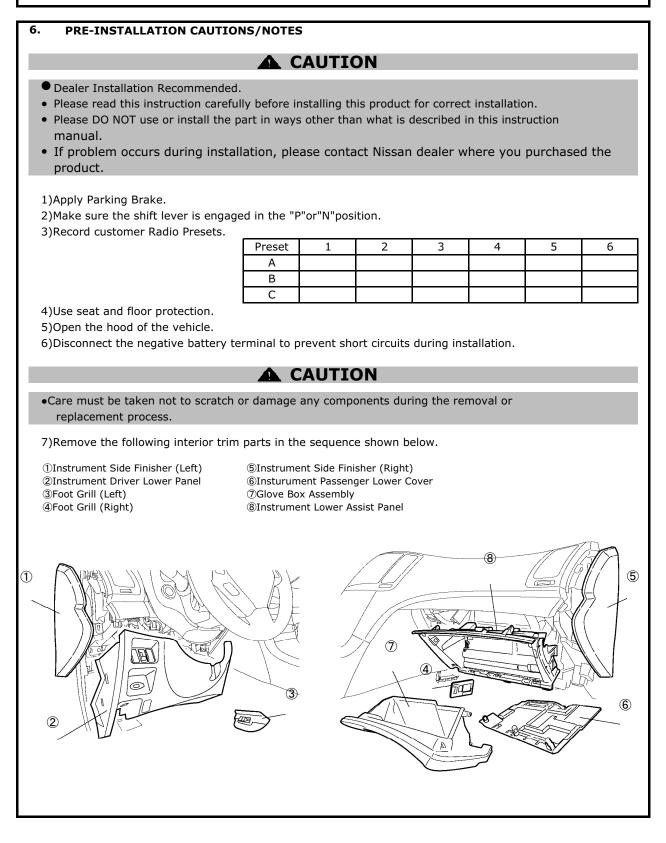


7. INSTALLATION OUTLINE

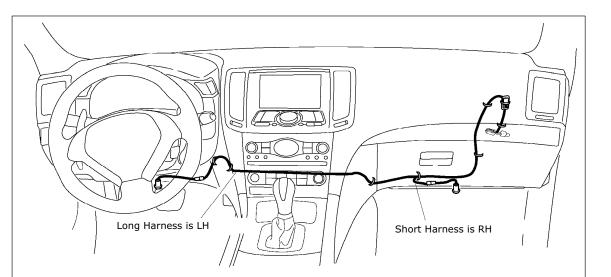

8. STANDARD CONNECTION METHOD

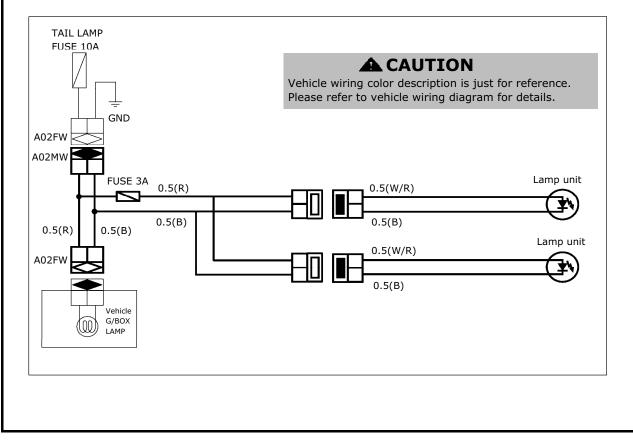


9. TRIM REMOVAL

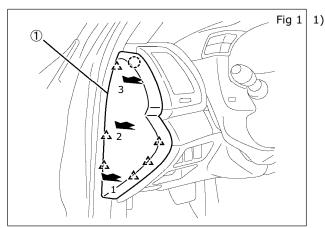


- 1) Remove instrument side finisher (Left)①.
 - a) Insert a remover tool into lower space.
 - b) Pull the instrument side finisher (Left)① crosswise.

:Clip :Pawl

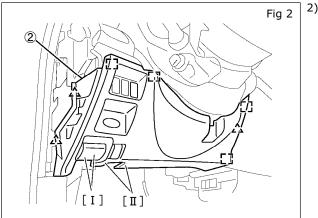


- 2) Remove instrument driver lower panel 2.
 - a) Remove hood opener mounting bolts [I].
 - b) Remove data link connector mounting screws [I].
 - c) Pull back instrument driver lower panel⁽²⁾.
 - d) Disconnect harness connectors.


<u>∕</u>:Pawl ∷Metal clip

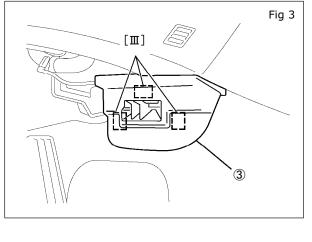

 Remove mounting clips [Ⅲ] , and then remove foot grille (Left)③.

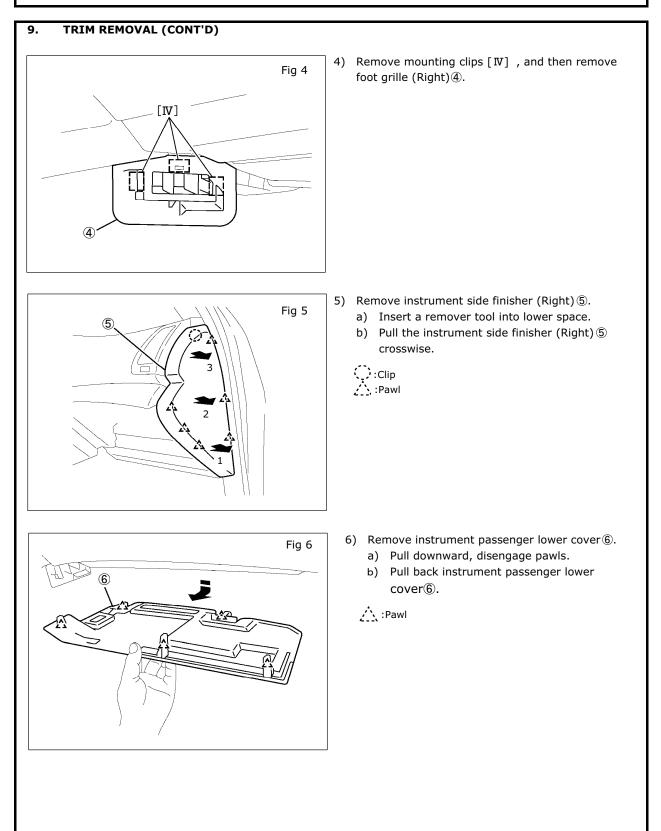



9. TRIM REMOVAL (CONT'D)

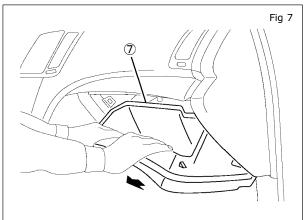


- 7) Remove glove box assembly \overline{O} .
 - a) Open the glove box.
 - b) Pull up glove box assembly ⑦.


c) Remove damper pin [V] of left side.

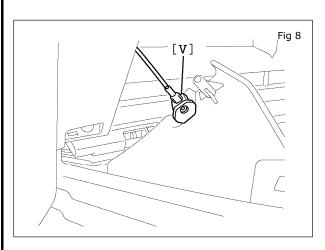


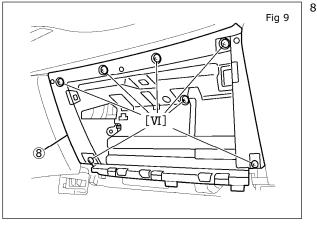



- 8) Remove instrument lower assist panel (8).
 - a) Remove instrument lower assist panel® mounting screw [VI] with power tool.
 - b) Pull back instrument lower assist panel (8).
 - c) Disconnect harness connector.

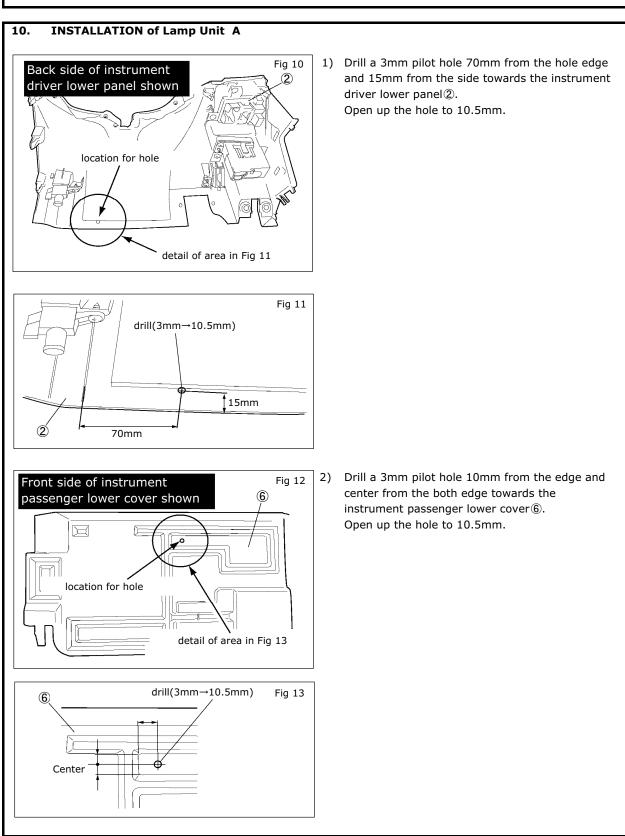

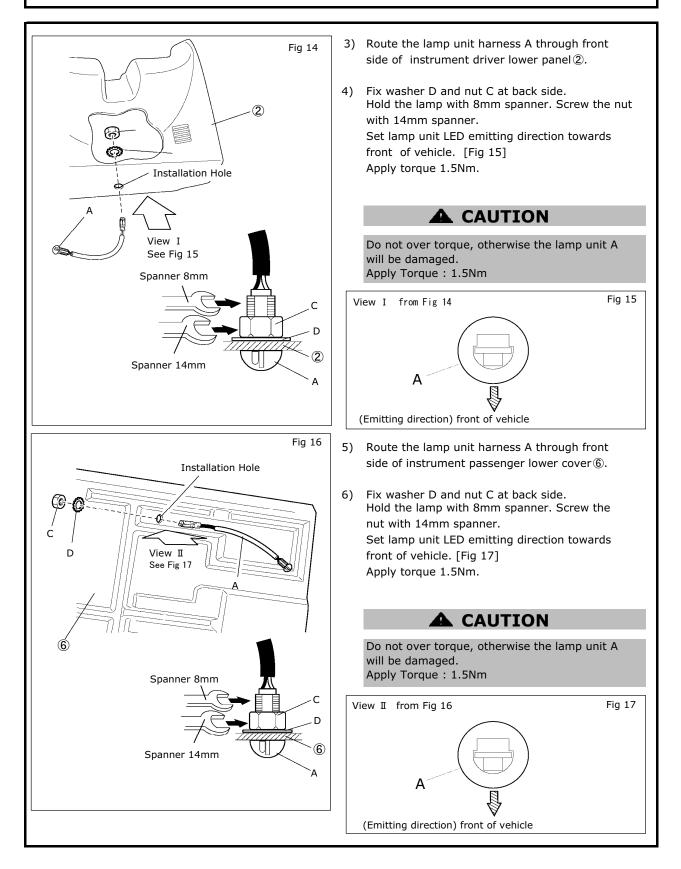

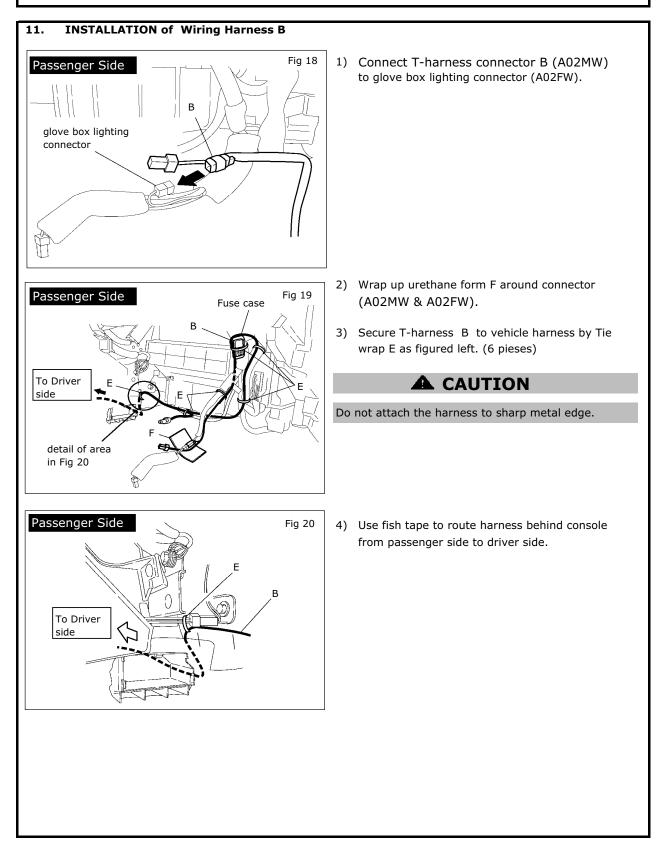

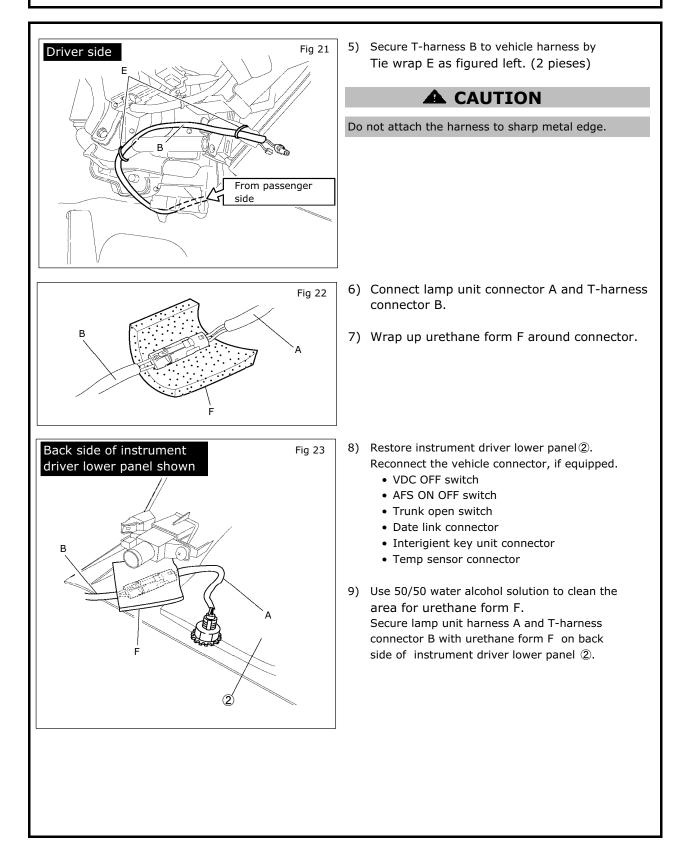

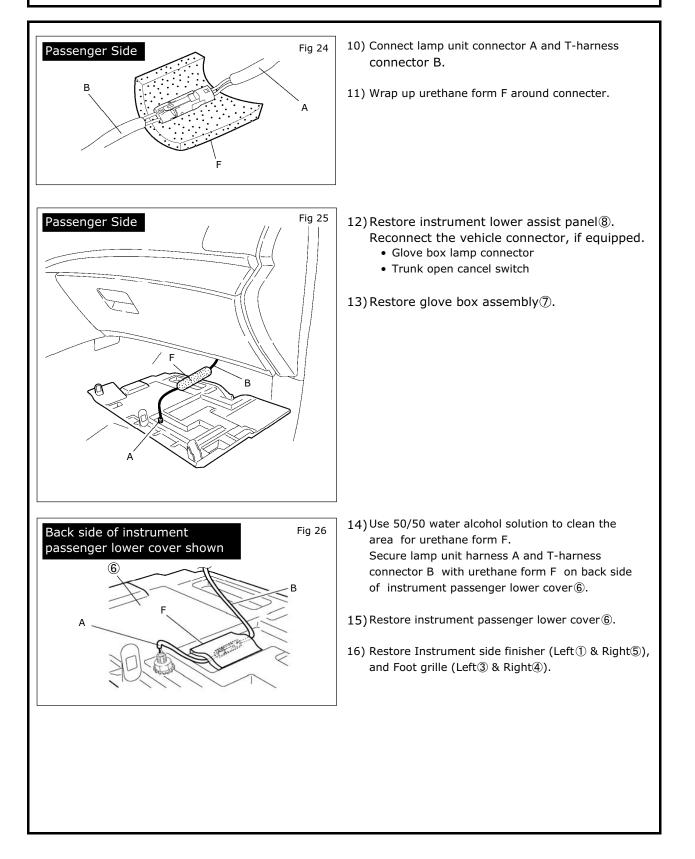

12. CHECK AFTER INSTALLATION	
 1) Please check that the installation has no problem. a) confirm connection of each connector. b) Confirm whether wire harness is fixed, No free hanging harness that may cause r noise. 	rattling
13. FUNCTION CHECK	
 Connect the battery's negative terminal. Confirm that ambient lights are turned on when vehicle head light switch is ON. Confirm that ambient lights are emitting towards front of vehicle. 	
14. VEHICLE CHECK	
 1) Remove all tools from the vehicle. 2) Inspect all reinstalled interier trim parts for proper panel fit . 3) Turn ignition to the ON position. 4) Reset radio presets to the recorded setting. 5) Confirm proper radio operation. 6) Initialize sun roof, and power window operation. 7) Confirm proper operation of the rear window washer fluid. 8) Confirm vehicle switch functions. 9) Turn ignition to off position. 	
 During restoring, please use caution so as not to cause the stacking of the vehicle's harness 	s, or damage
any other parts.	