



GENUINE PARTS

INSTALLATION INSTRUCTIONS

DESCRIPTION:	Air Bag Anti Theft Bolt M8	
APPLICATION:	Q50, Q60	
PART NUMBER:	999M1 AD000	
KIT CONTENTS:		
Item	Qty.	Part Description
	1	Passenger Side Airbag Anti Theft Bolt M8
A	10	Lock Bolt M8
B	1	Installation Instruction Replacement Template



A



B

TOOLS REQUIRED:

- 3/8" Drive ratchet & extension
- 3/8" Drive 12mm hex socket
- 3/8" Drive torque wrench
10-20 ft-lb (13.5~27.1Nm) range
- Master Key Set
(KENT-MOORE P/N J-42057)
- Phillips screwdriver

PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:

- See applicable vehicle service manual for additional tools required to gain access to air bag module.
- Airbag anti-theft bolt master key sets are service tools that are only available to franchised INFINITI/NISSAN dealers.
- Due to special tool and service manual availability, this accessory is for dealer installation only.


WARNING

**Do not disconnect the electrical connectors to either the key FOB sensor or the sonar control sensor.
Lower instrument cover must be lowered without disconnecting any electrical wiring.**


INSTALLATION PROCEDURE:

1. Make sure ignition is in off position.
2. Record the pre-set radio stations.
3. Disconnect battery ground cable.
4. Utilize the vehicle specific service manual for trim removal sequence.
5. Wait at least 3 minutes before starting the next procedure.

NOTE: On the passenger side of vehicle the glove box must be removed prior to bolt installation.

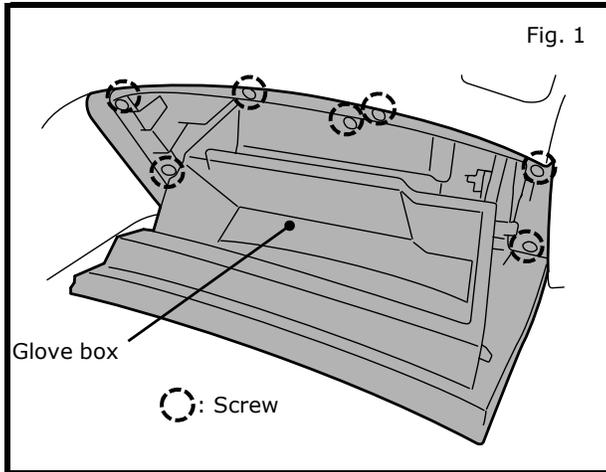


- 1) Glove Box removal
 - a) Remove (7) mounting screws from glove box as shown in Fig.1.
 - b) Pull and remove the glove box.

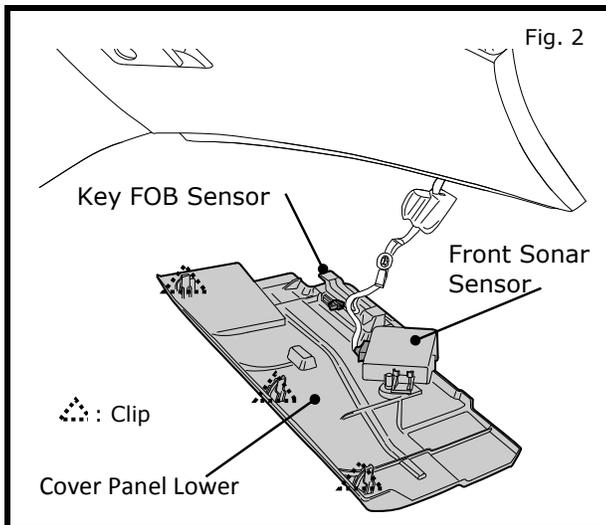

NOTE:
DISCONNECTING THE WIRE HARNESS TO EITHER THE KEY FOB SENSOR OR SONAR SENSOR WILL CAUSE VEHICLE KEY TO MALFUNCTION.

- 2) Remove lower panel cover by disconnecting 3 plastic clips as shown in figure 2

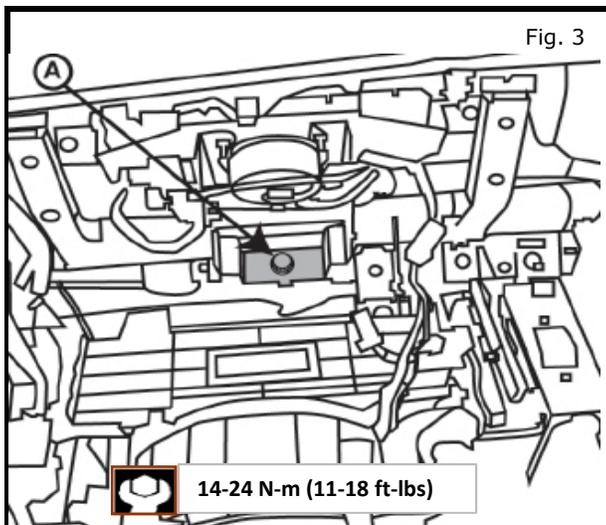

- 3) To install passenger side anti-theft bolt follow steps (a) through (i).
 - a) Remove hex bolt (A) from mounting bracket.
 - b) Select a key from the air bag master key set (J-42057)
 - c) By hand, install the security bolt in place of the airbag bolt removed in step a.
 - d) Use a torque wrench to tighten the security bolt
 - e) Replace panel cover removed in step 1.
 - f) Re-install glove box.
 - g) Re-connect battery cables.
 - h) Reset radio stations and clock.
 - i) Reset sun-roof.