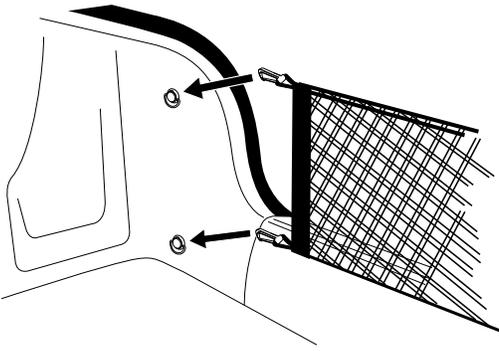
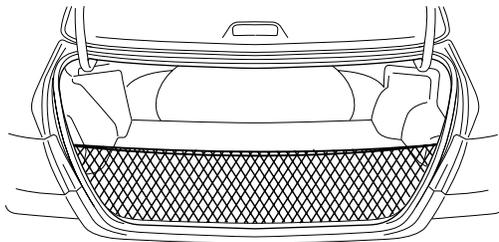


INSTALLATION INSTRUCTIONS

1. DESCRIPTION:	CARGO NET, TRUNK	
2. APPLICATION:	G37 COUPE	
3. PART NUMBER:	999C1 JUC00	
4. KIT CONTENTS:		
Item	Qty	Description
A	1	CARGO NET
B	1	INSTALLATION INSTRUCTION REPLACEMENT TEMPLATE
5. TOOLS REQUIRED:	None	
6. INSTALLATION PRECAUTIONS / NOTES:	<ol style="list-style-type: none"> 1. Ensure that net is securely attached so cargo does not fall out during transit. 2. Keep this installation instruction sheet with Vehicle Owner's Manual for future reference. 3. Max load not to exceed 30 lbs. 	
7. INSTALLATION		
 <p style="text-align: right; margin-top: 10px;">Fig. 7.1</p>	<ol style="list-style-type: none"> 1) Locate the attachment points in the trunk. 2) Attach the cargo net hooks on the net to the D-ring anchors on the passenger's side of the trunk. (Fig. 7.1) 3) Attach the cargo net hooks on the other side of the net to the D-ring anchors on the driver's side of the trunk. (Fig. 7.2) 	
 <p style="text-align: right; margin-top: 10px;">Fig. 7.2</p>		