




GENUINE PARTS

INSTALLATION INSTRUCTIONS

DESCRIPTION:	Cargo Tray
APPLICATION:	QX80
PART NUMBER:	999C3 3X000 & 999C3 3X002

KIT CONTENTS:

Item	Qty.	Part Description	Service Part Number
A	1	Cargo Tray	999C3 3X00x
B	1	Installation Instructions Replacement Template	999V2 AW000

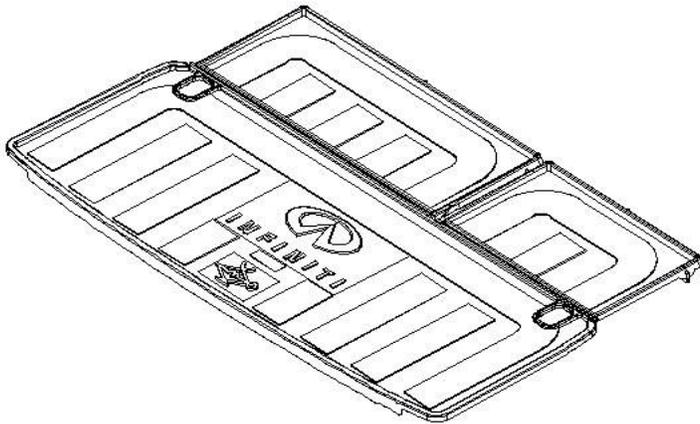

A



B

TOOLS REQUIRED:

- No tools required.


PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:

- Dealer Installation Recommended. Instructions may refer to Service Manual.
- To maintain the luster of your cargo tray, clean with a cloth as required using standard automotive vinyl, leather and upholstery cleaners or soap and water.


⚠ WARNING

- **Your tray is designed to transport normal cargo contents. Flammable or dangerous materials should not be transported in your vehicle at any time. If any corrosive chemicals are spilled on your tray it should be cleaned as described above.**


INSTALLATION PROCEDURE:

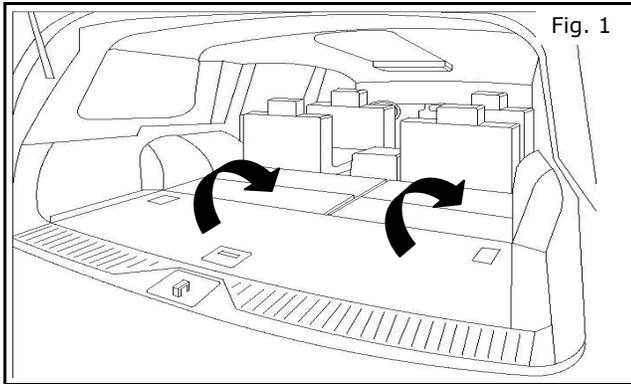


- 1) Fold 3rd row seats down flat (**See Fig. 1**).

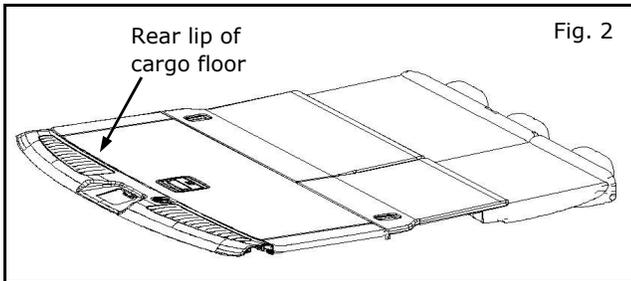


- 2) Place tray into cargo area, aligning rear lip of tray with rear lip of cargo floor (**See Fig. 2**).

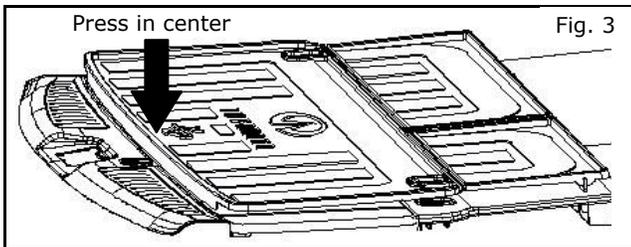

- 3) Starting at the center, rear edge of tray, press down so rear lip of tray slides between rear sill and cargo floor (**See Fig. 3**).

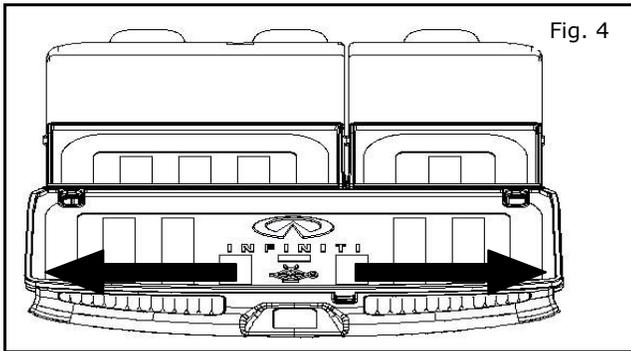

- 4) Next, press down on the rear edge and follow rear edge all the way out to both sides (**See Fig. 4**).

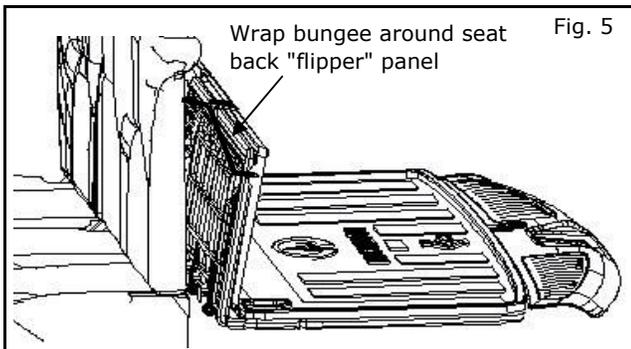

- 5) Starting with driver side, pull the "flipper" panel away from the seat back and wrap the bungee cord (already supplied on tray) around the back side of the "flipper" panel. Repeat on passenger side (**See Fig. 5**).