




GENUINE PARTS

INSTALLATION INSTRUCTIONS

DESCRIPTION:	Cargo Area Protector
APPLICATION:	QX60
PART NUMBER:	999C3 R2004 (Black w/Manual 3rd Row Seat) 999C3 R2006 (Black w/Manual 3rd Row Seat; No Cut-Out) 999C3 R2104 (Black w/Power 3rd Row Seat) 999C3 R2106 (Black w/Power 3rd Row Seat; No Cut-Out)

KIT CONTENTS:


Item	Qty.	Part Description	Service Part Number
A	1	Cargo Area Protector	999C3 R2xxx
B	2	Hinge-Assy	999C3 RZ100S1
C	1	Installation Instruction Replacement Template	999V2 AW000

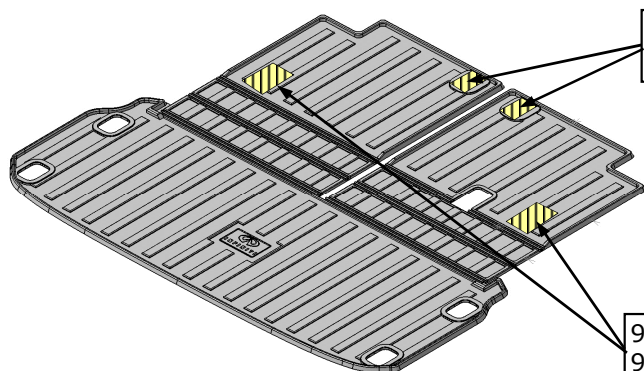

A

999C3 R2x04: Has Cut-Out
999C3 R2x06: No Cut-Out

999C3 R200x: Has Cut-Out
999C3 R210x: No Cut-Out

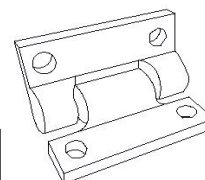

B



C

TOOLS REQUIRED:


- #3 Phillips Screw Driver
- 4mm (5/32") Allen Head Socket Driver

PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:


WARNING

Protector is designed to transport normal cargo contents. Flammable or dangerous materials should not be transported in your vehicle at any time.


INSTALLATION PROCEDURE:

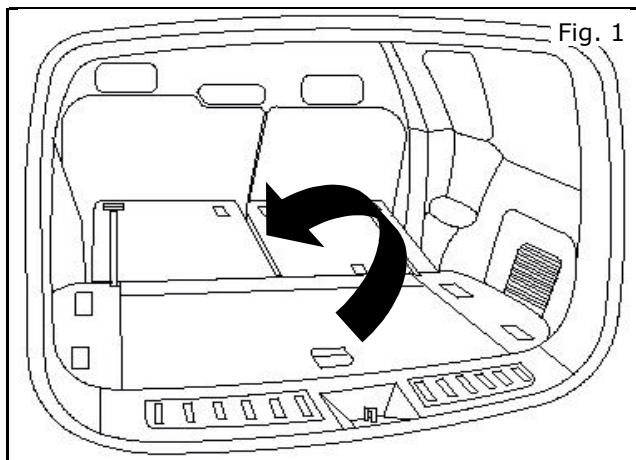

- 1) Fold down headrests and 3rd row seats.

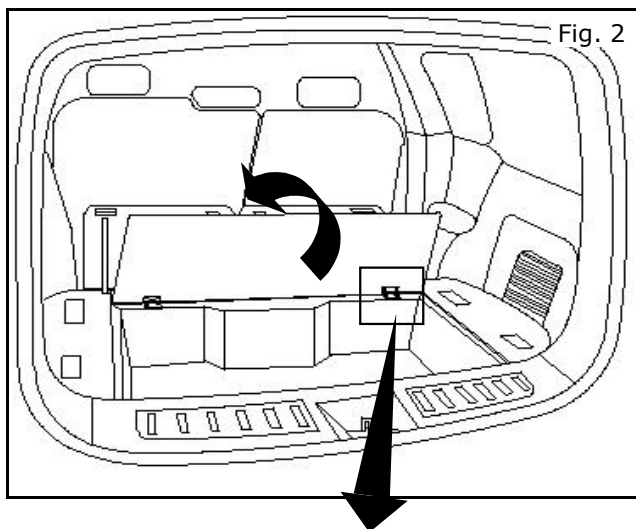


- 2) Lift up cargo bin lid to upright position.

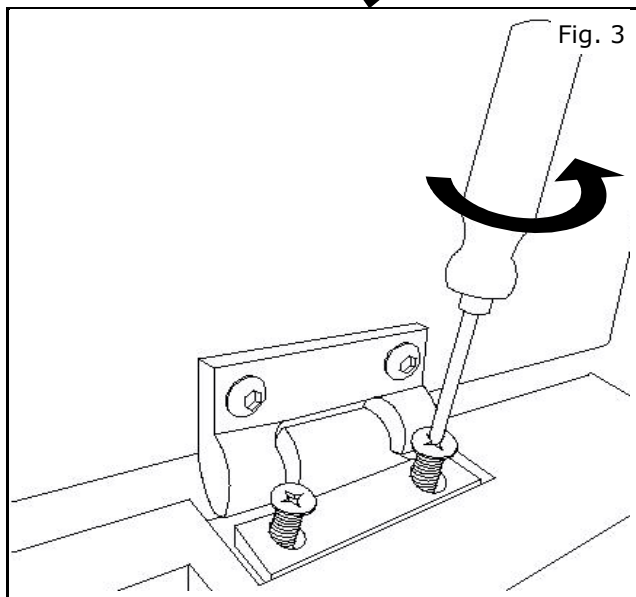


- 3) Loosen and remove (2) passenger side hinge screws with phillips screw driver. Keep screws for later use.
- 4) Repeat for driver side.

INSTALLATION PROCEDURE:



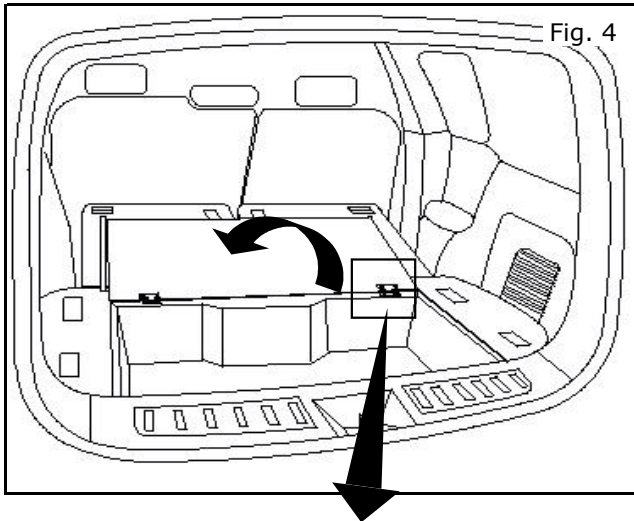


- 5) Lay cargo bin lid on back of 3rd row seats.

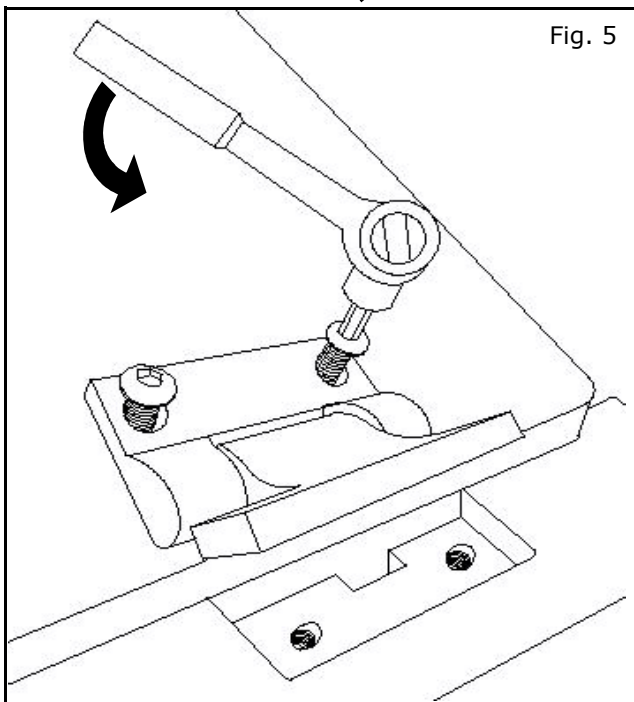


- 6) Loosen and remove (2) passenger side hinge screws with 4mm allen head socket driver. Keep screws for later use. Discard hinge.
- 7) Repeat for driver side.

INSTALLATION PROCEDURE:

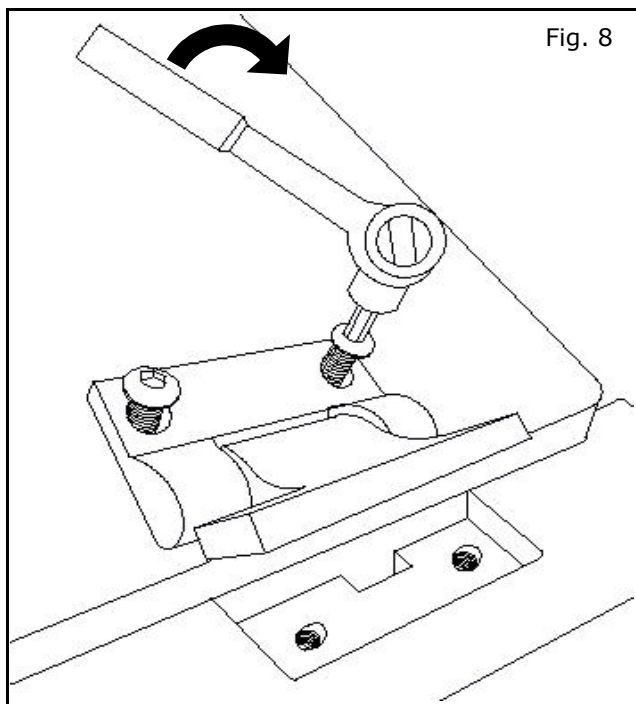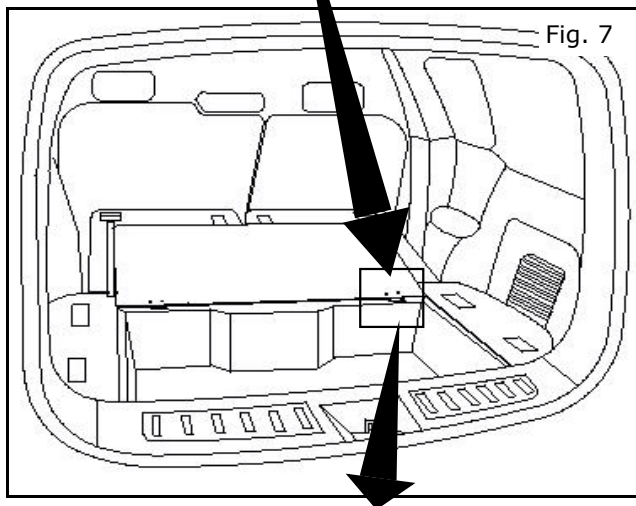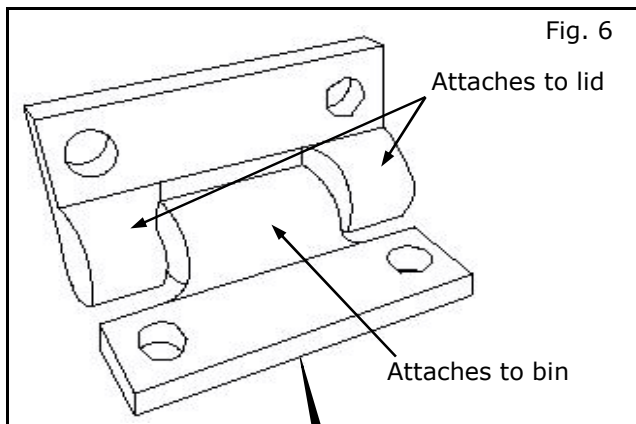


- 8) Remove new molded hinge assembly from packaging and orient hinge as shown in Fig. 6.
- 9) Align passenger side molded hinge assembly with holes on bottom of cargo bin lid.
- 10) Tighten (2) hinge screws with 4mm allen head socket driver to 1.5~2.0 Nm [1.1~1.5 lb-ft].
- 11) Repeat for driver side.

INSTALLATION PROCEDURE:

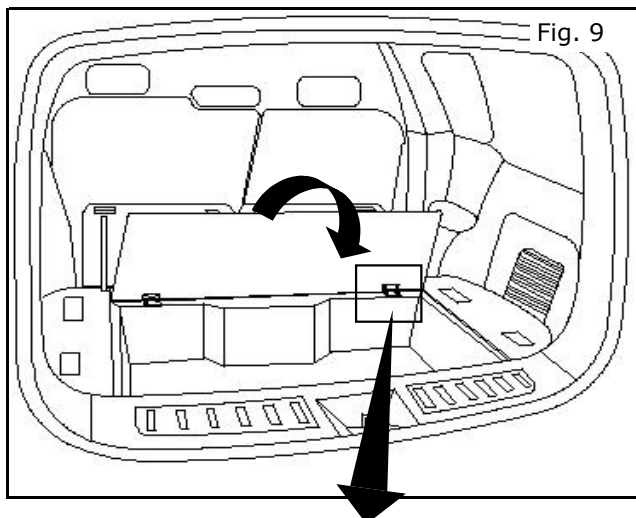


- 12) Place cargo bin lid in upright position, aligning lower hinge holes with vehicle holes.

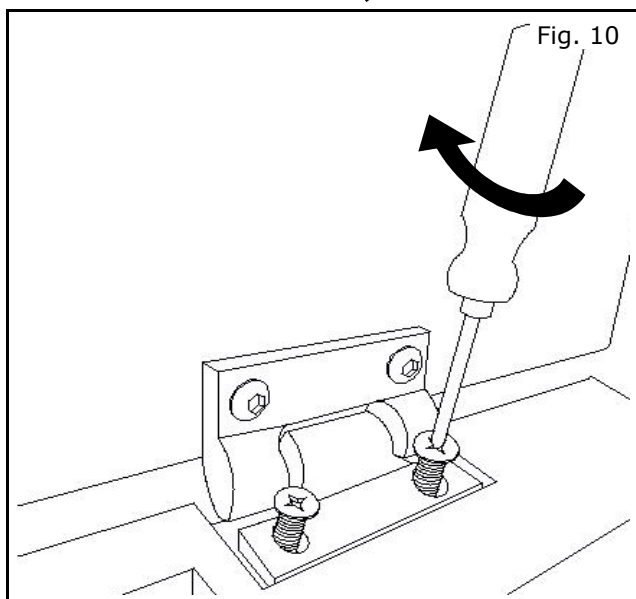

- 13) Tighten (2) passenger side hinge screws with phillips screw driver to 1.5~2.0 Nm [1.1~1.5 lb-ft].

- 14) Repeat for driver side.

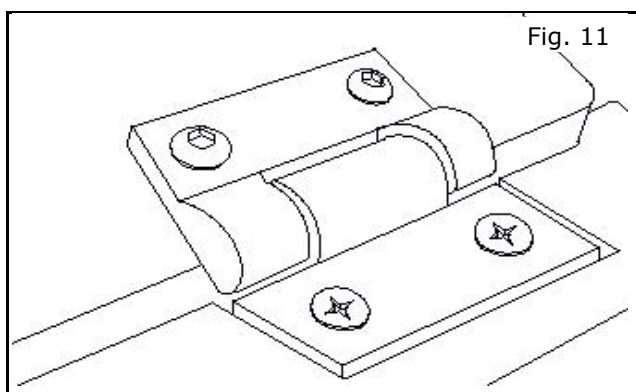

- 15) Ensure both molded hinge assemblies are attached with specified torque.

INSTALLATION PROCEDURE:

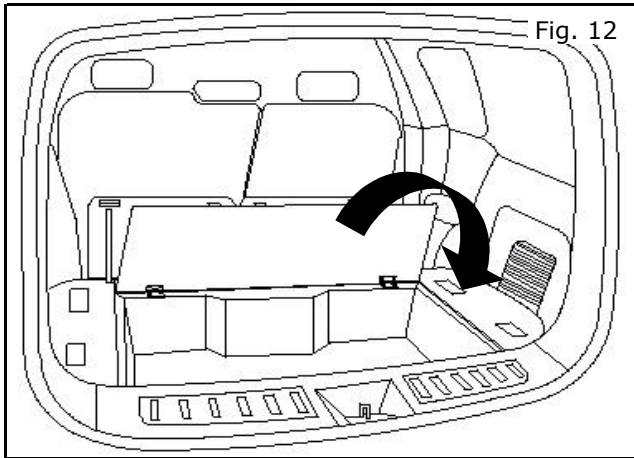


Fig. 12

16) Close cargo bin lid.

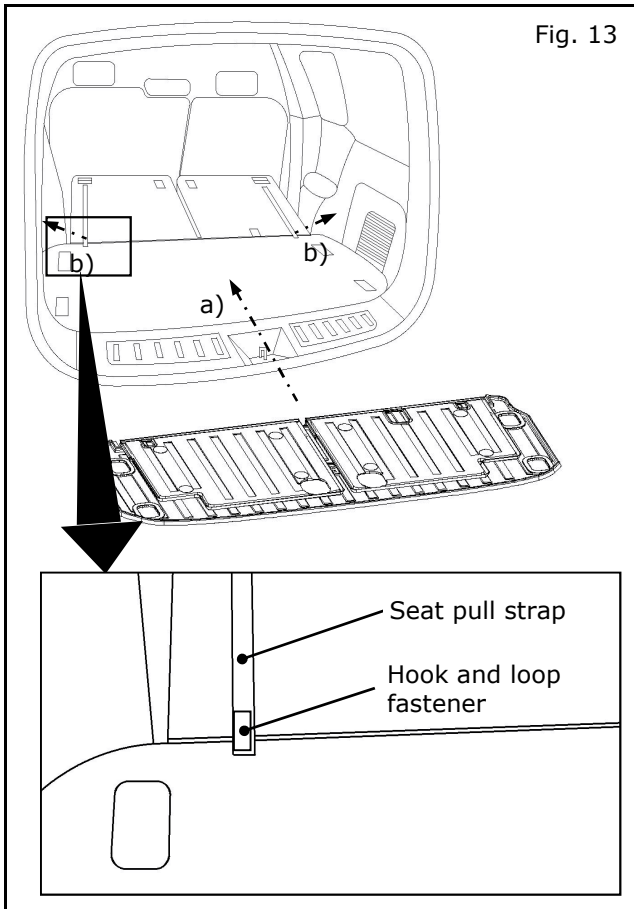



Fig. 13

- 17) With protector in folded position:
- a) Place protector into vehicle cargo area and align tray openings with tie-down hooks.
 - b) Disconnect hook and loop fastener on seat pull straps. Move both seat pull straps aside.

NOTE:


For vehicles equipped with Power 3rd Row Seats, there are no seat pull straps. For these vehicles, apply Cargo Protectors without cut-outs (999C3 R210x).

INSTALLATION PROCEDURE:

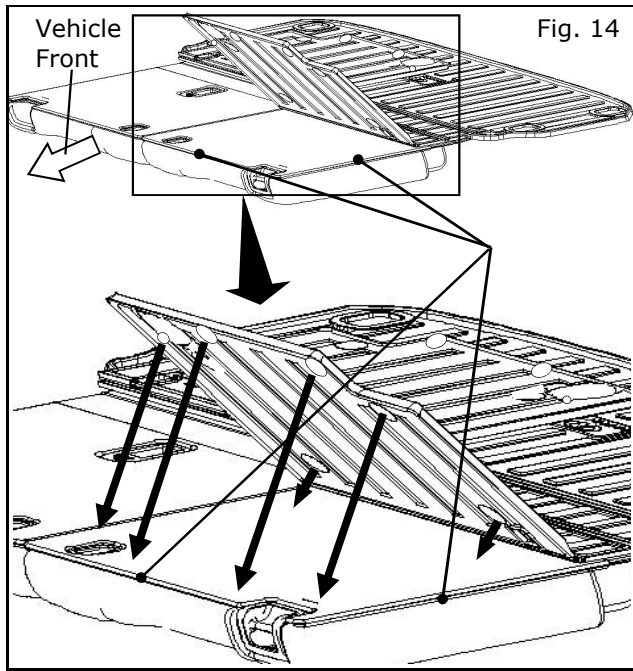


- 18) Unfold driver side protector flap and align edges and openings to seat back edges and features.

- 19) Repeat step 18 for passenger side.

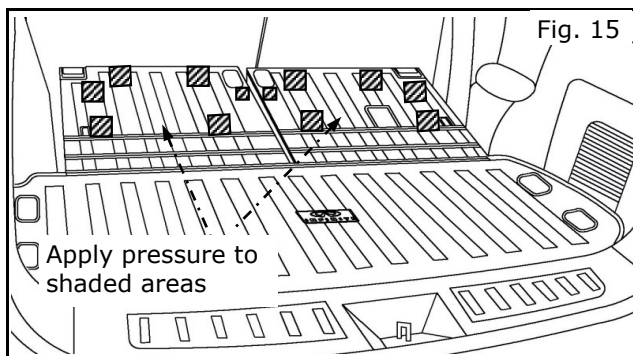

- 20) Apply pressure to shaded areas in figure 15 to secure hook and loop features.

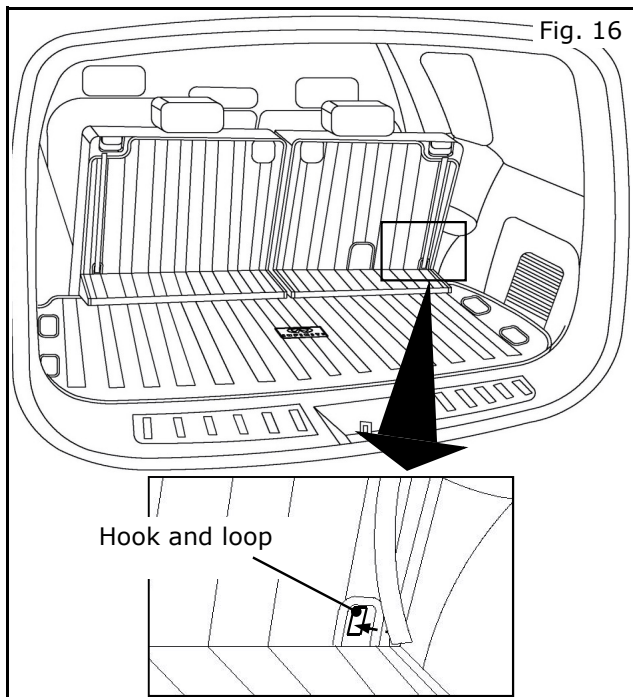

- 21) Pull seat straps to return seats to original position and re-attach seat straps to hook and loop fasteners.

NOTE:

For vehicles equipped with Power 3rd Row Seats, there are no seat straps.

For these vehicles, apply Cargo Protectors without cut-outs (999C3 R210x).