




GENUINE PARTS

INSTALLATION INSTRUCTIONS

DESCRIPTION:	Trunk Net
APPLICATION:	Q70
PART NUMBER:	999C1 QX000

KIT CONTENTS:

Item	Qty.	Part Description
A	1	Trunk Net
B	1	Installation Instruction Replacement Template



A



B

TOOLS REQUIRED:

- No tools required.

PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:

- Ensure that net is securely attached so cargo does not fall out during transit.
- Keep this installation instruction sheet with Vehicle Owner's Manual for future reference.
- Max load not to exceed 30 lbs.

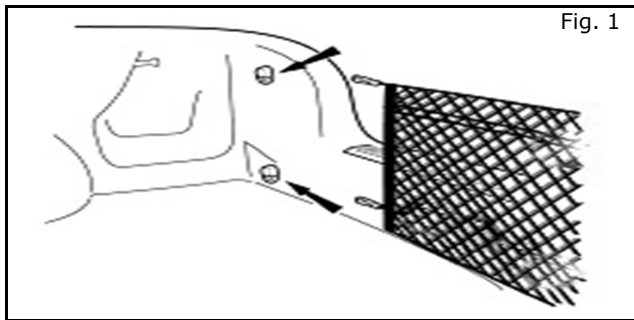


Fig. 1

- 1) Locate D-rings in trunk.
- 2) Attach trunk net hooks to the D-rings on the passenger side of trunk (Fig. 1).

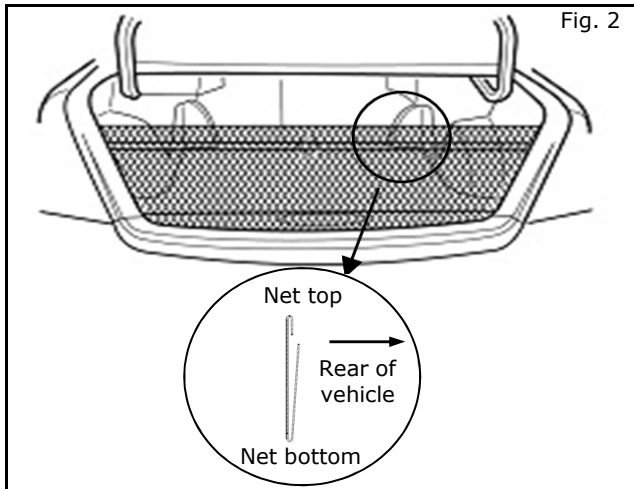


Fig. 2

- 3) Attach trunk net hooks on the other side of the net to the D-rings on the driver's side of trunk.

NOTE:

- **Make sure the opening on the top of the net is facing rear of vehicle (Fig. 2).**