





GENUINE PARTS

INSTALLATION INSTRUCTIONS

DESCRIPTION:	Mirror Caps - Carbon Fiber
APPLICATION:	Q60/Q50
PART NUMBER:	T99L2 5CH2A

KIT CONTENTS:

Item	Qty.	Part Description
A	1	Carbon Fiber Outside Mirror Cover LH
B	1	Carbon Fiber Outside Mirror Cover RH
C	1	Installation Instruction Replacement Template

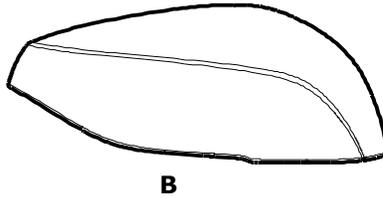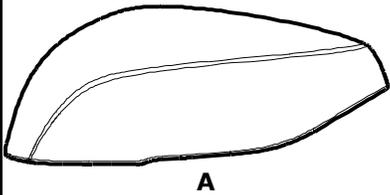

TOOLS REQUIRED:

- Clean, Lint-Free Cloth
- 90% Isopropyl Alcohol Solution.
- Masking Tape


PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:

- Dealer Installation Recommended. Instructions may refer to Service Manual.

⚠ WARNING

- Install the mirror covers when the ambient temperature is above 60°F (15°C).
- Do not wash or expose vehicle to a wet environment for 24 hours after installing mirror cover


INSTALLATION PROCEDURE:

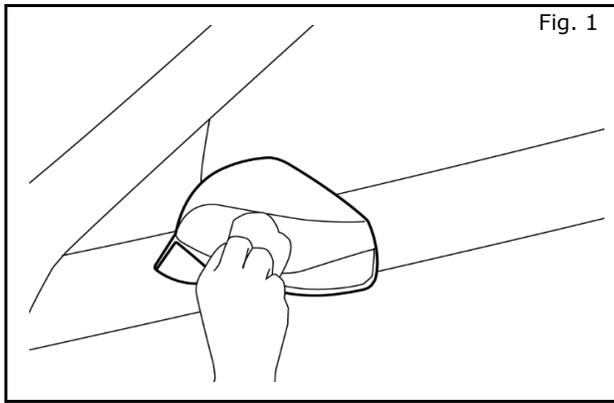


- 1) Clean each vehicle mirror housing thoroughly with soap and water to remove any dirt or debris and allow to dry.
- 2) Use isopropyl alcohol to clean mounting surface of each mirror housing.

CAUTION


• **Failure to clean the mounting surface properly may cause the adhesive tape to have poor adhesion to the vehicle.**

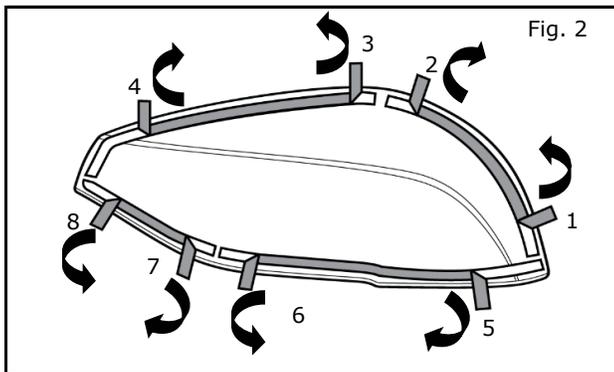

- 3) Pull tape liners diagonally to expose approximately 1" of tape from top and outboard pieces. Fold liner over outside edge of part and tape down with masking tape. See Fig. 3.

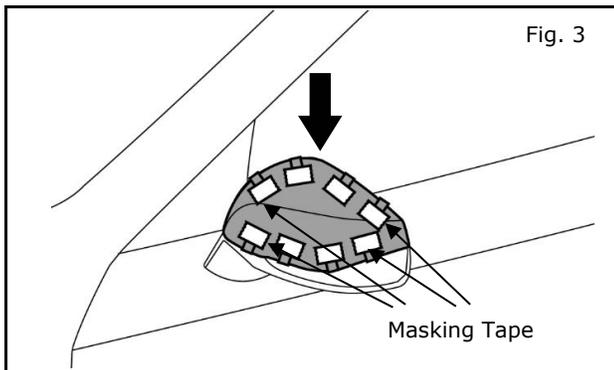

- 4) Align top and outboard edges of mirror cover to mirror housing ensuring uniform spacing to edge of mirror housing.
- 5) Lightly press on top and outboard edges at exposed tape end locations.
- 6) Confirm alignment/coverage of mirror housing. If trim line is exposed, remove mirror cover and realign.

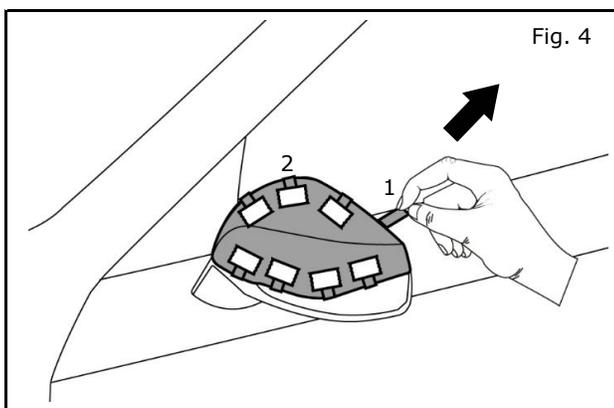



- 7) Remove 2 top tape liners by pulling tab away from mirror cover. Remove liners in order shown.

NOTE:

If liners are difficult to remove, gently pull up on part when pulling liners.

- 8) Lightly press top edge to the mirror housing.

INSTALLATION PROCEDURE: (continued)

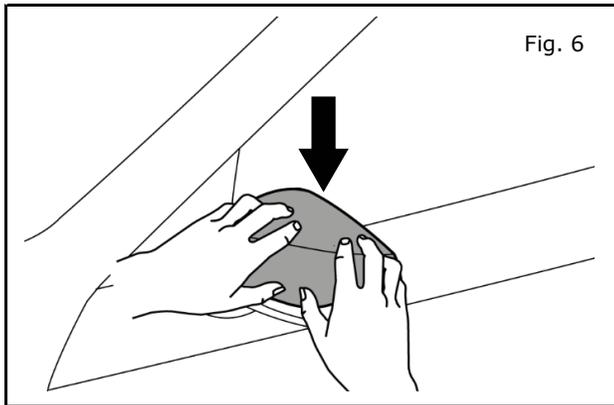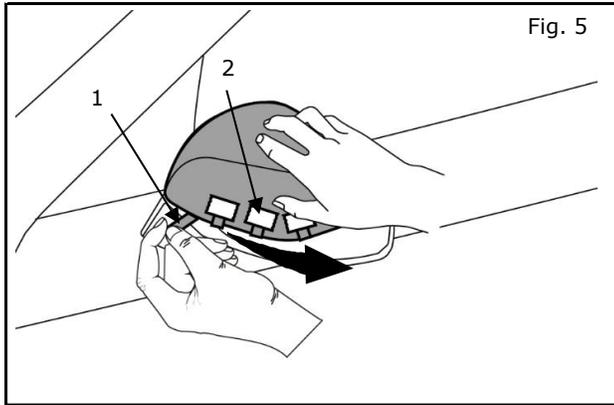

- 9) Remove 2 bottom tape liners by pulling tab away from mirror cover in order shown.
- 10) Lightly press outboard edge to mirror housing.
- 11) **After ensuring mirror cap is properly located,** firmly and uniformly press mirror cover to housing and hold for thirty (30) seconds.
- 12) Gently buff Mirror Cover with soft cloth if necessary.
- 13) Repeat installation process for opposite side of vehicle.
- 14) Do not wash vehicle, tug, or pull on mirror cover for 24 hours.