





GENUINE PARTS

INSTALLATION INSTRUCTIONS


DESCRIPTION: Console Net		
APPLICATION: QX60		
PART NUMBER: 999C7 R6000		
KIT CONTENTS:		
Item	Qty.	Part Description
A	1	Console Net
B	1	Installation Instruction Replacement Template
C	1	Installation Hardware Kit
D	4	• 1/4 Turn Fastener
E	1	Drill Template

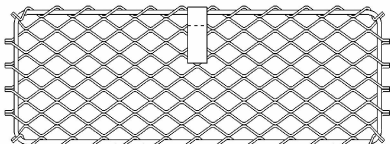

A



B



D

TOOLS REQUIRED:	
<ul style="list-style-type: none"> Drill 10.5mm (13/32") drill bit 	<ul style="list-style-type: none"> Masking Tape





PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:

- Dealer installation recommended.
- Ensure that net is securely attached so cargo does not fall out during transit.
- Keep this installation instruction sheet with Vehicle Owner's Manual for future reference.
- Max load not to exceed 5 lbs.
- Net suitable for installation on passenger side of vehicle only.
- Net is not a cargo retention device and is not intended to secure items during a collision.
- Loaded contents of net shall not exceed perimeter bungee.
- Do not load sharp objects.

⚠ CAUTION

• Wiring located behind installation points, exercise caution when drilling.

INSTALLATION PROCEDURE:

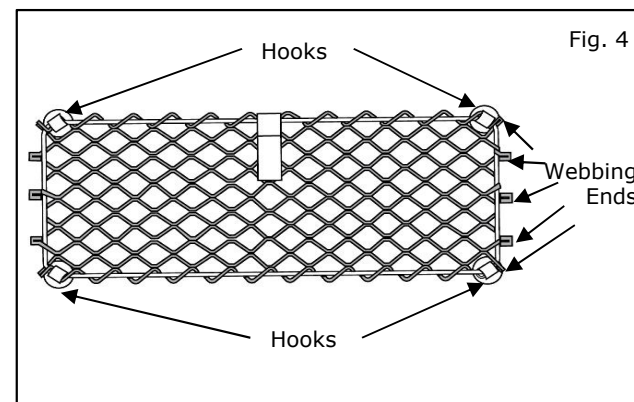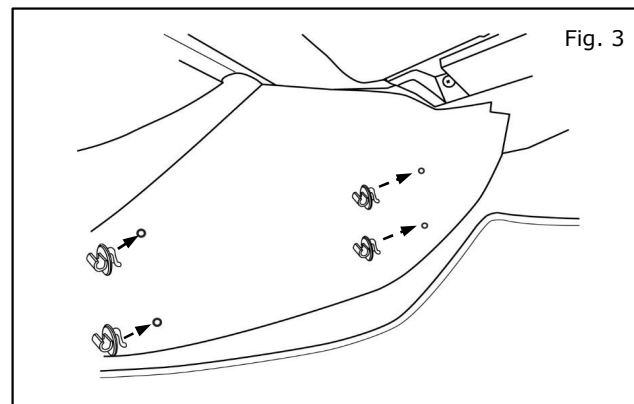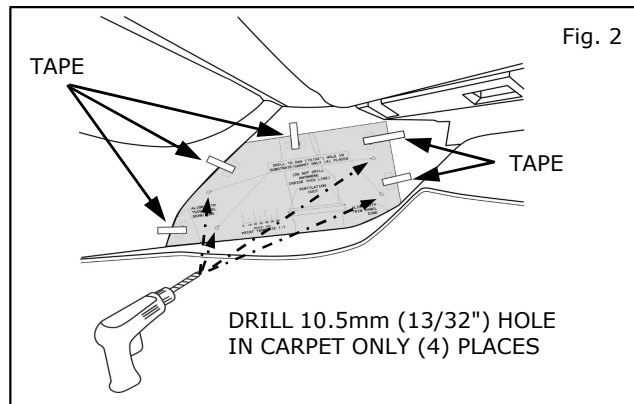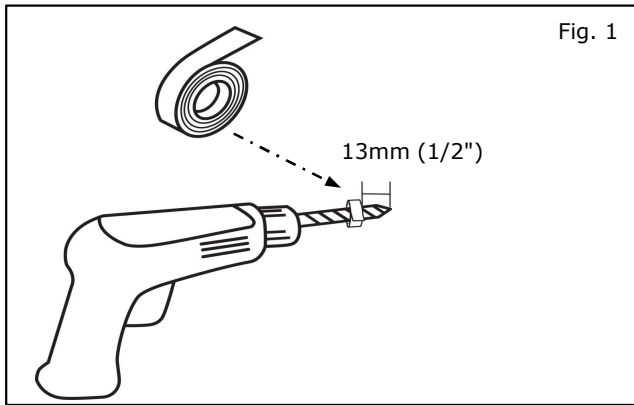

- 1) Wrap masking tape on 10.5mm (13/32") drill bit to limit drill depth to 13mm (1/2").


- 2) Cut template as instructed.
- 3) Align template as shown on passenger side center console; tape to secure.
- 4) Drill at 4 locations on template and remove template.

- 5) Install 1/4 turn fasteners at 4 drilled locations and rotate clockwise to engage.

NOTE:

- When attaching hooks, ensure there are five webbing ends between top and bottom hook on both sides of net. See Figure.
- Loop bungee portion of net around hooks.

INSTALLATION PROCEDURE:

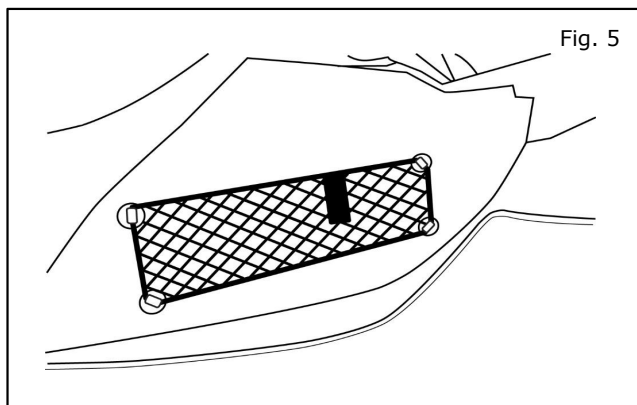

- 6) Attach bungee to 4 fasteners.