




## GENUINE PARTS

### INSTALLATION INSTRUCTIONS

|                     |             |
|---------------------|-------------|
| <b>DESCRIPTION:</b> | Console Net |
| <b>APPLICATION:</b> | QX80        |
| <b>PART NUMBER:</b> | 999C7 36000 |

#### KIT CONTENTS:

| Item | Qty. | Part Description                              |
|------|------|---|
| A    | 1    | Console Net                                   |
| B    | 1    | Installation Instruction Replacement Template |
| C    | 1    | Installation Hardware Kit                     |
| D    | 4    | • 1/4 Turn Fastener                           |
| E    | 1    | Drill Template                                |

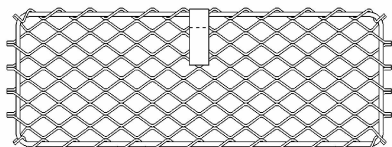

**A**



**B**



**D**

#### TOOLS REQUIRED:

- Drill
- Masking Tape
- 7mm (9/32") drill bit


#### PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:

- Dealer installation recommended.
- Ensure that net is securely attached so cargo does not fall out during transit.
- Keep this installation instruction sheet with Vehicle Owner's Manual for future reference.
- Max load not to exceed 5 lbs.
- Net suitable for installation on passenger side of vehicle only.
- Net is not a cargo retention device and is not intended to secure items during a collision.
- Loaded contents of net shall not exceed perimeter bungee.
- Do not load sharp objects.


#### CAUTION

- Wiring located behind installation points, exercise caution when drilling.


## INSTALLATION PROCEDURE:

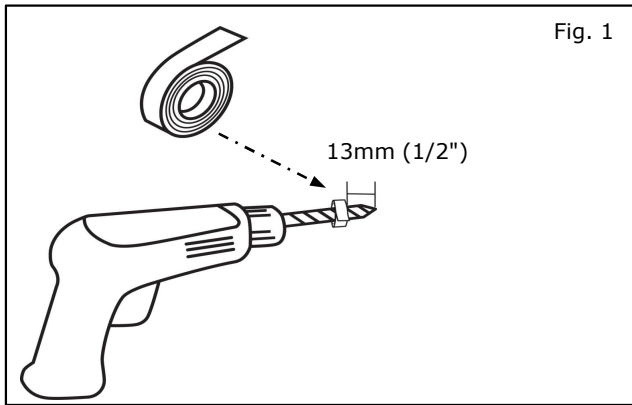


- 1) Wrap masking tape on 7mm (9/32") drill bit to limit drill depth to 13mm (1/2").

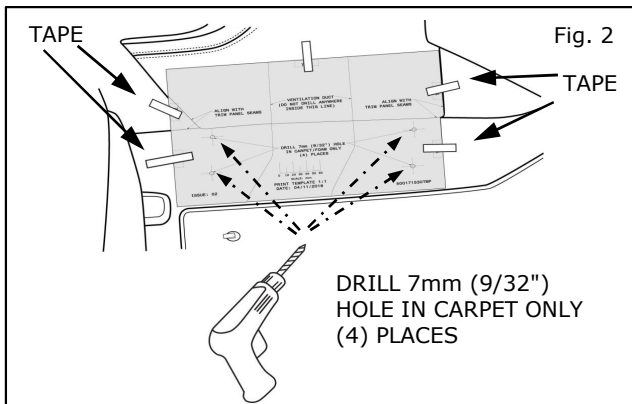

- 2) Cut template as instructed.
- 3) Align template as shown on passenger side center console; tape to secure.
- 4) Drill at 4 locations on template and remove template.

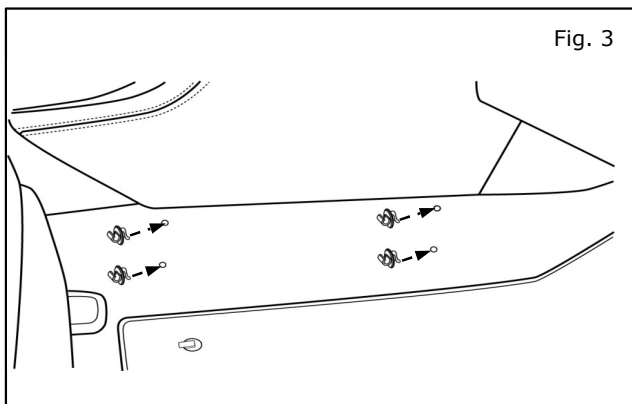


- 5) Install 1/4 turn fasteners at 4 drilled locations and rotate clockwise to engage.

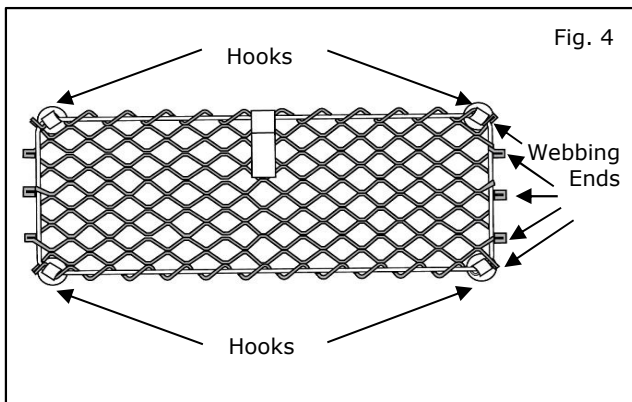

### NOTE:

- When attaching hooks, ensure there are five webbing ends between top and bottom hook on both sides of net. See Figure.
- Loop bungee portion of net around hooks.

## INSTALLATION PROCEDURE:

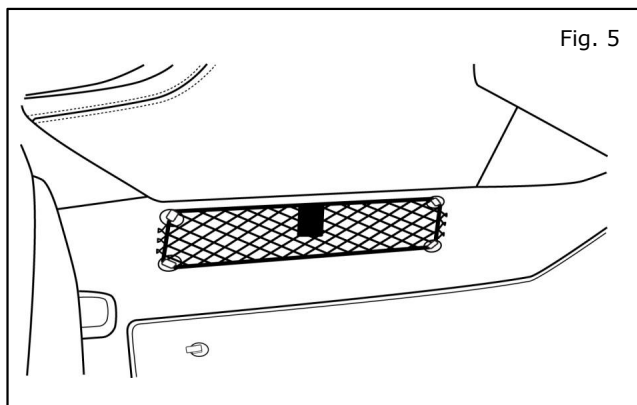

- 6) Attach bungee to 4 fasteners.