

GENUINE PARTS

INSTALLATION INSTRUCTIONS

1. DESCRIPTION: Rear Splash Guard Kit

2. APPLICATION: EX35

3. PART NUMBER: 999J2 5U004

4. KIT CONTENTS:

Item	QTY	Description	Part Number
Α	1	Splash Guard – Rear Right	
В	1	Splash Guard – Rear Left	
С	6	Screw	14-51 00841
D	4	Spring Clip (Large)	12-41 0017U
Е	2	Spring Clip (Small)	12-41 0016U
F	2	Push Pin	11296 AG000
G	1	Installation Instructions Replacement Template	999V2 AW000









D



Ε





G

5.


- **TOOLS REQUIRED:**
- clean rag
- mild soap/water mixture
- #2 phillips screwdriver
- standard screwdriver
- drill
- 6mm (1/4") drill bit

PRE-INSTALLATION NOTES: 6.


• These installation instructions are for the left side of the vehicle; the same procedure applies to the right side.

INSTALLATION INSTRUCTIONS - Rear Splash Guard Kit


7. INSTALLATION PROCEDURE:

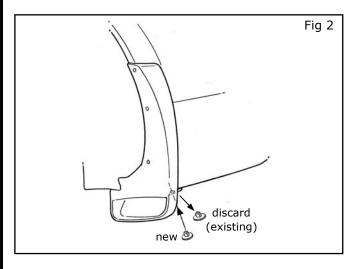

- 1) Remove rear wheel. **FOLLOW PROCEDURE IN OWNER'S MANUAL**.
- 2) Position rear splash guard.
 - a) Remove and discard existing push pin.
 - b) Clean installation surface.
 - c) Align splash guard to vehicle.
 - d) Push rearward on front of splash guard.
 - e) Install new push pin through hole in tab.

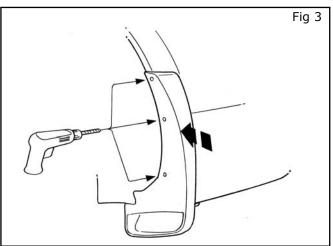

- 3) Drill holes.
 - a) Push inward and upward.
 - b) Using part as a template, drill (3) 6mm (1/4") holes in fender trim.

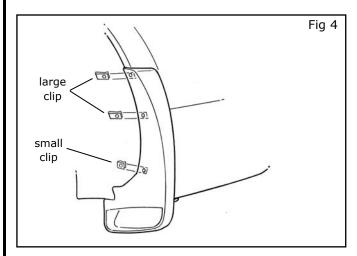


- 4) Install spring clips on fender trim edge.
 - a) Install 2 large spring clips over upper and middle drilled holes.
 - b) Install 1 small spring clip over lower drilled hole.

NOTE:

INSTALL SPRING CLIP WITH FLAT EDGE ON OUTSIDE OF FASCIA.

INSTALLATION INSTRUCTIONS - Rear Splash Guard Kit

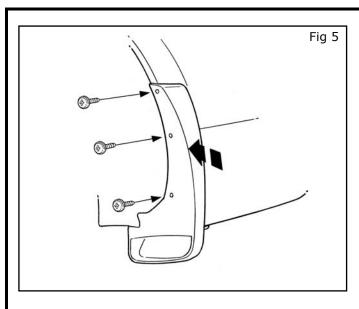

- 5) Install screws.
 - c) Push inward and upward.
 - d) Install lower screw.
 - e) Install middle screw.
 - f) Install upper screw.

NOTE:

HOLD THE SPLASH GUARD TIGHT TO THE VEHICLE WHILE TIGHTENING THE SCREWS TO ENSURE NO GAP OCCURS BETWEEN FENDER AND SPLASH GUARD.