

## **Genuine Parts**

# **INSTALLATION INSTRUCTIONS**

1. **DESCRIPTION**: CARGO NET, TRUNK

**2. APPLICATION:** G35 SEDAN (2007)

**3. PART NUMBER:** 999C1 JT000

## 4. KIT CONTENTS:

Item	Qty	Description
Α	1	CARGO NET
В	1	INSTALLATION INSTRUCTION REPLACEMENT TEMPLATE

#### 5. TOOLS REQUIRED:

None

### 6. INSTALLATION PRECAUTIONS / NOTES:

- 1. Ensure that net is securely attached so cargo does not fall out during transit.
- 2. Keep this installation instruction sheet with Vehicle Owner's Manual for future reference.
- 3. Max load not to exceed 30 lbs.

## 7. INSTALLATION

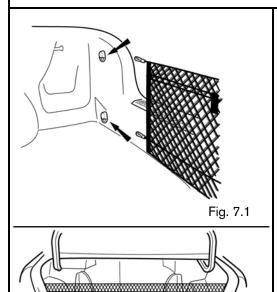


Fig. 7.2

- 1) Locate the D-rings in the trunk.
- 2) Attach the cargo net hooks on the net to the D-Rings on the passenger side of the trunk. (Fig. 7.1)
- 3) Attach the cargo net hooks on the other side of the net to the D-Rings on the driver's side of the trunk. Make sure the handle on the net is facing outwards, away from the inside of the trunk. (Fig. 7.2)