



Genuine Parts

INFINITI®

INSTALLATION INSTRUCTIONS

1. DESCRIPTION:	CARGO NET	
2. APPLICATION:	INFINITI QX56 (2011MY)	
3. PART NUMBER:	999C1 3X000	
4. KIT CONTENTS:		
Item	Qty	Description
A	1	CARGO NET
B	1	INSTALLATION INSTRUCTION REPLACEMENT TEMPLATE
5. TOOLS REQUIRED:		
None		
6. INSTALLATION PRECAUTIONS / NOTES:		
<ol style="list-style-type: none"> 1. Ensure that net is securely attached so cargo does not fall out during transit. 2. Keep this installation instruction sheet with Vehicle Owner's Manual for future reference. 3. Max load not to exceed 30 lbs. 		

7. INSTALLATION

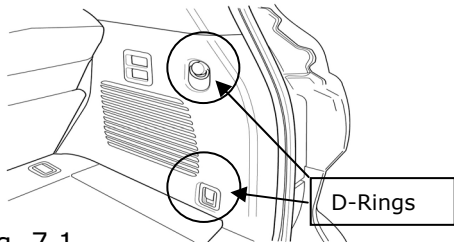


Fig. 7.1

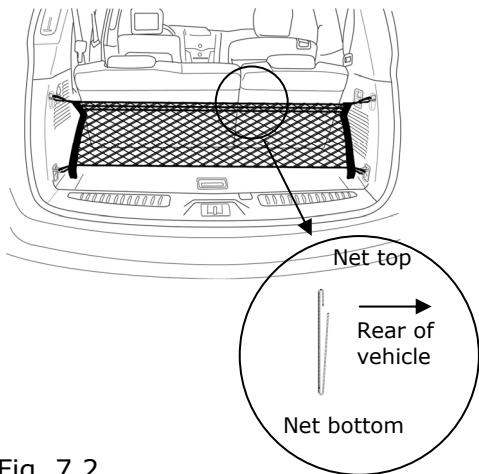


Fig. 7.2

- 1) Locate the D-rings in the cargo area (4 total). (Fig. 7.1 shows passenger side only.)
- 2) Attach the cargo net hooks on the net to the D-Rings on the passenger side.
- 3) Attach the cargo net hooks on the other side of the net to the D-Rings on the driver's side. Make sure the opening on the top of the net is facing rear of the vehicle. (Fig. 7.2)