


# **GENUINE PARTS**

# **INSTALLATION INSTRUCTIONS**

	ATION: UMBER				
	NTENTS				
Item	Qty.	·-	Description		Service Part Number
A	1	Midnight Black (			
B	1		ruction Replacement Template		
	Anna I	Server Contraction		Control of the second s	
DOLS REQUIRED: Flathead screwdriver Clip Remover			<ul> <li>Masking Tape</li> <li>10mm Socket &amp; Driver</li> </ul>	• Needle nose p • Tape	bliers
		ATION WARNIN tion Recommend	<b>G, CAUTIONS CRITICAL STE</b> ed.	PS, and NOTES:	

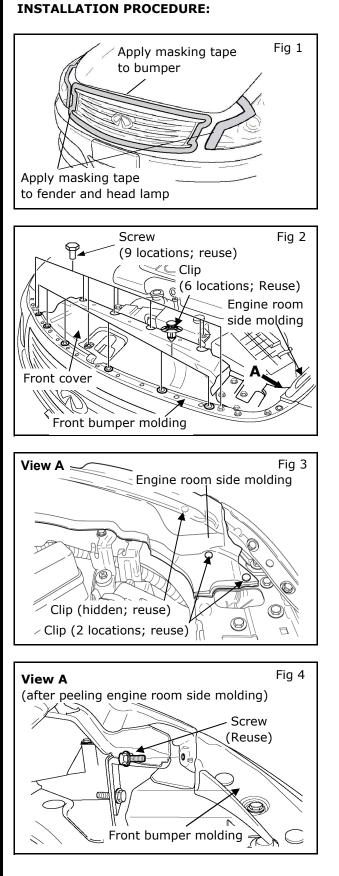


- 1) Open vehicle engine hood.
- Apply masking tape to front fender, head lamp and bumper, around the grille, to prevent scratches. See Fig 1.

- 3) Remove screws and clips that attach the front cover to the vehicle. See Fig 2.
- 4) Remove screws that attach the reservoir tank to the vehicle.

 Partially peel back the engine room side molding and remove the engine room side molding clips (RH and LH). See Fig 3.

6) With the engine room side molding partially peeled back remove a screw (RH and LH).See Fig 4.

## INSTALLATION PROCEDURE:

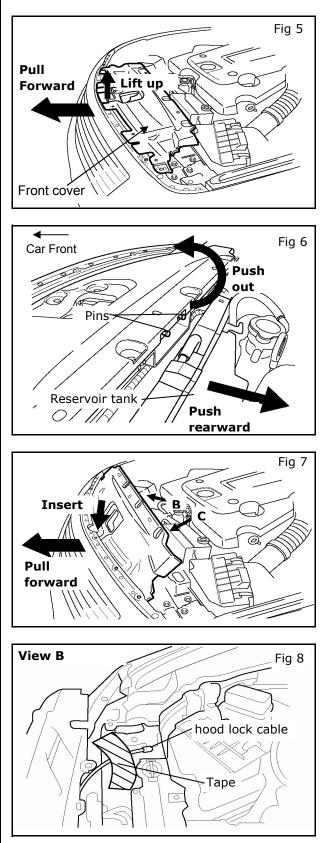

 While pulling the top of the bumper forward, lift the front edge of the front cover up and sit it on the bumper. See Fig 5.

 Push reservoir tank rearward, push front cover rearward and rotate until the front cover disengages from pins. See Fig 6.


 While pulling the top of the bumper forward, insert the front edge of front cover under the top of the bumper. See Fig 7.


 Fix hood lock cable to vehicle with tape. See Fig 8.


## NOTE;


Secure hood lock cable with tape to prevent cable from separating from hood lock bracket and latch.

### **INSTALLATION PROCEDURE:**

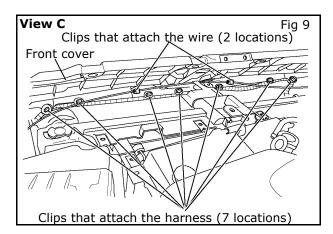

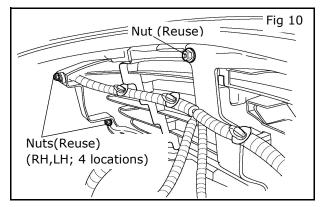

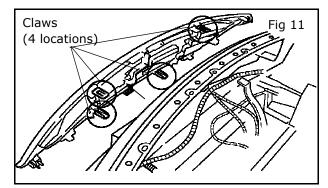

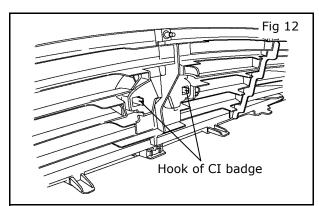

11) Remove clips that attach the hood lock cable and harness to the front cover then remove front cover. See Fig 9.


#### NOTE:

- It is not necessary to remove hood lock cable from hood lock.
- If end of cable came out bracket, attach cable to bracket and also confirm end of cable is attached to latch.
- 12) Remove the nuts that attach the radiator grille. See Fig 10.

 By hand, unhook the grille claws from the bumper and slowly remove the grille by pulling the grille away from bumper. See Fig 11.

14) Unhook and remove CI badge (reuse) from the grille. See Fig 12.

### **INSTALLATION PROCEDURE:**

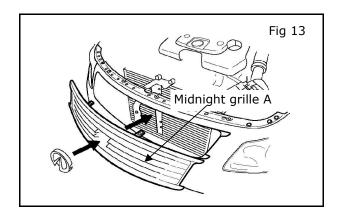

- 15) Assemble the CI badge that was removed from the grille in step 14) to Midnight grille A.
- 16) Align Midnight grille A claws to the holes in bumper.
- 17) Push Midnight grille A against the bumper until Midnight grille A claws are fully inserted and locked.
- 18) Fix Midnight grille A with the nut that were removed in step 12).
- 19) Attach the hood lock cable and harness to clips that were detached in 11) properly.
- 20) Reinstall all removed parts in reverse order.
- 21) Remove all the masking tape from the vehicle.
- 22) Confirm operation of hood lock cable by using release lever inside vehicle. Close hood.

#### **FINAL INSPECTION**

Confirm operation of hood lock cable by using release lever inside vehicle.