



GENUINE PARTS

INSTALLATION INSTRUCTIONS

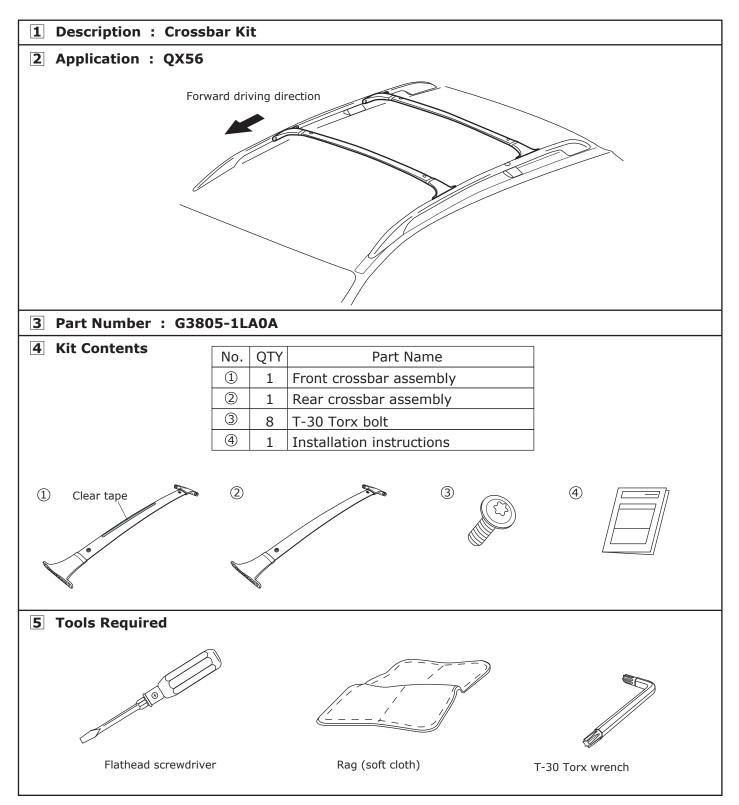

Page 1 of 7

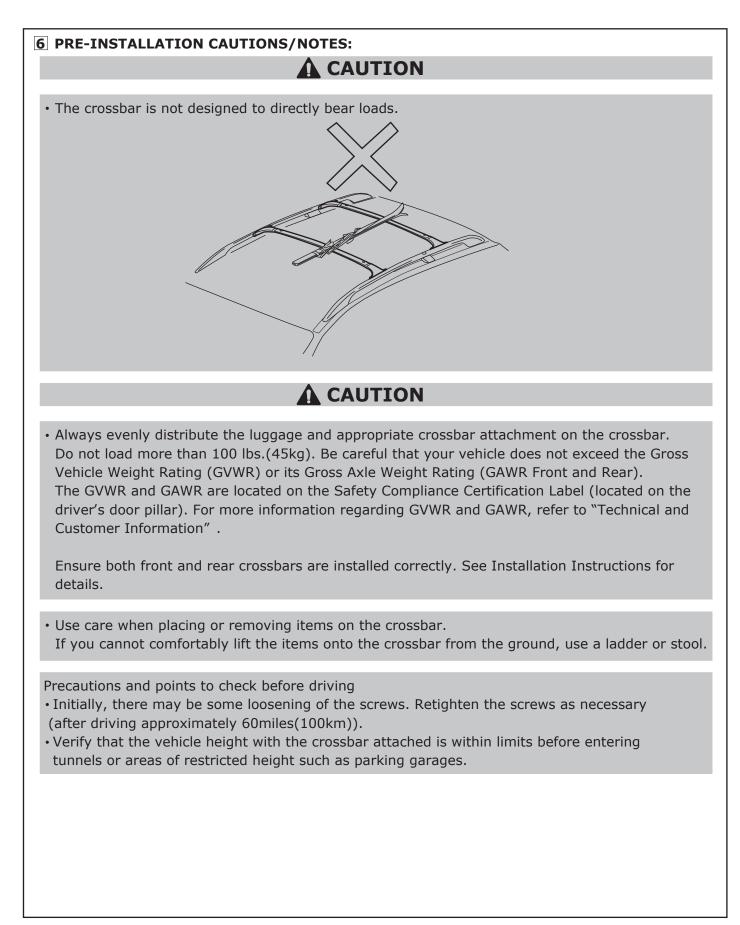


7 INSTALLATION PROCEDURE:

— A CAUTION –


- During installation, take precautions to prevent scratching or damaging the vehicle.
- Perform installation in a spacious area to allow opening and closing the vehicle doors.

1. Cleaning the Installation Area on the Vehicle

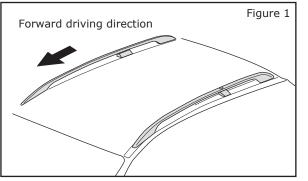


(1) Use a damp cloth to clean the area where the crossbar will be installed (as indicated by the shaded areas) as shown in Figure 1.

2. Preparing for Installation

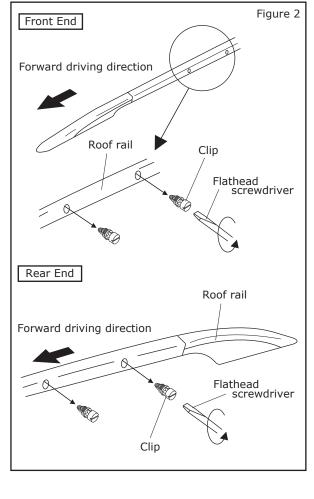

- Use a flathead screwdriver to loosen and remove the clips attached to the left roof rail at two positions on the front and two positions on the rear.
- (2) Repeat step 1 on the right side roof rail.

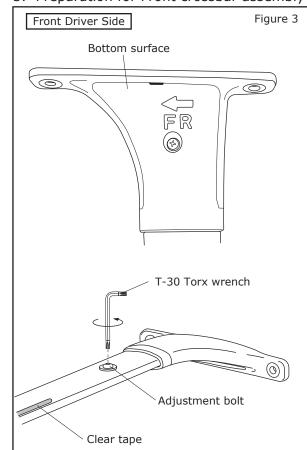


- 3. Preparation for Front crossbar assembly ①
- Identify and obtain the Front crossbar by using Figure 3.
 Note: Crossbar "FR" stamping should always point toward front of Car.
- (2) Loosen the adjustment bolts on both sides of the Front crossbar assembly^① using the T-30 torx wrench.

- $m m m \Lambda$ caution -


Clear tape is only attached on Front crossbar assembly.

Do not remove clear tape.

4. Installation of Front crossbar assembly 1

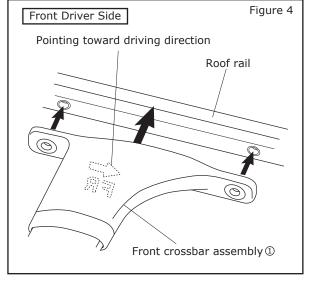


(1) Align Front crossbar assembly to the driver roof rail mounting location as shown in Figure 4.

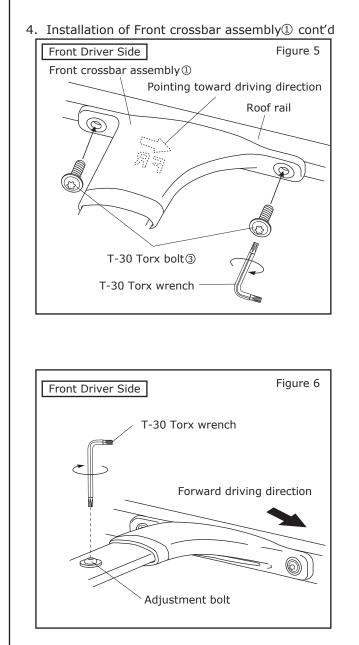

- (2) While aligned, install and fasten T-30 torx bolts³ and Front crossbar assembly¹ to the roof rail mounting location as shown in Figure 5.
 - Note:Torque to 4.2 6.3 ft-lbs.(5.6-8.4 N-m).
- (3) Repeat steps (1) & (2) on the right side roof rail.


(4) Fasten adjustment bolts on the left side of the Front crossbar assembly① using the T-30 torx wrench.

Note:Torque to 4.2 - 6.3 ft-lbs.(5.6-8.4 N-m).

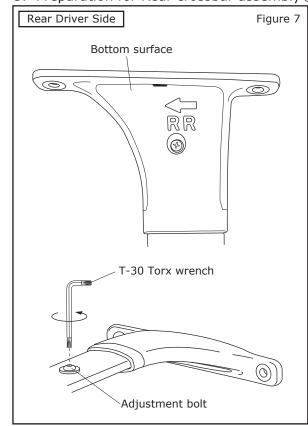


5. Preparation for Rear crossbar assembly 2

6. Installation of Rear crossbar assembly⁽²⁾

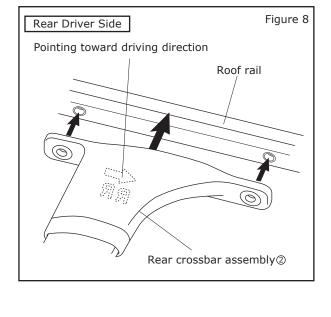

- Identify and obtain the Rear crossbar by using Figure 7.
 Note: Crossbar "RR" stamping should always point toward front of Car.
- (2) Loosen the adjustment bolts in both sides of the Rear crossbar assembly² using the T-30 torx wrench.

 Align Rear crossbar assembly to the driver roof rail mounting location as shown in Figure 8.

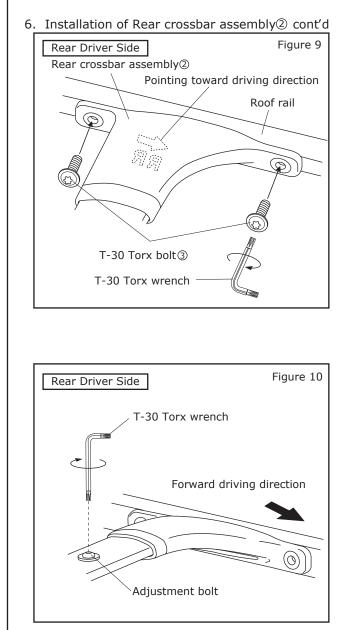

- (2) While aligned, install and fasten T-30 torx bolts③ and Rear crossbar assembly② to the roof rail mounting location as shown in Figure 9.
 - Note:Torque to 4.2 6.3 ft-lbs.(5.6-8.4 N-m).
- (3) Repeat steps (1) & (2) on the right side roof rail.

(4) Fasten adjustment bolts on the left side of the Rear crossbar assembly⁽²⁾ using the T-30 torx wrench. Note:Torque to 4.2 - 6.3 ft-lbs.(5.6-8.4 N-m).

- 7. Points to Check after Installation
 - (1) Check the tightness of the crossbar screws after installation.
 - (2) Gently wiggle the crossbar to check for problems. Verify that there are no noises or movement when pushed and pulled.
 - (3) If you notice problems in steps 1-2, follow the installation instructions again.