

# GENUINE PARTS




## INSTALLATION INSTRUCTIONS

<b>DESCRIPTION:</b>	Shopping Bag Hook
<b>APPLICATION:</b>	Q50
<b>PART NUMBER:</b>	999C2 J2001

### KIT CONTENTS:


Item	Qty.	Part Description
A	1	Shopping Bag Hook
B	1	Phillips Head Screw #6-32 x 1"
C	1	Jack Nut #6-32
D	1	Jack Nut Friction Wrench
E	1	Installation Instruction Replacement Template

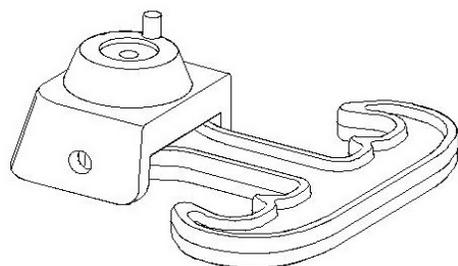


A



B



C



D



E


### TOOLS REQUIRED:

- #2 Phillips Screw Driver
- Flat Head Screw Driver
- Cordless Drill
- 3/16" Metal Drill Bit
- Hammer
- Center Punch
- Scissors


### **⚠ WARNING**

- Shopping Bag Hook is designed to transport normal cargo contents. Flammable or dangerous materials should not be transported in your vehicle at any time.
- Do not exceed the recommended load of 15 lbs per Shopping Bag Hook.


## INSTALLATION PROCEDURE:

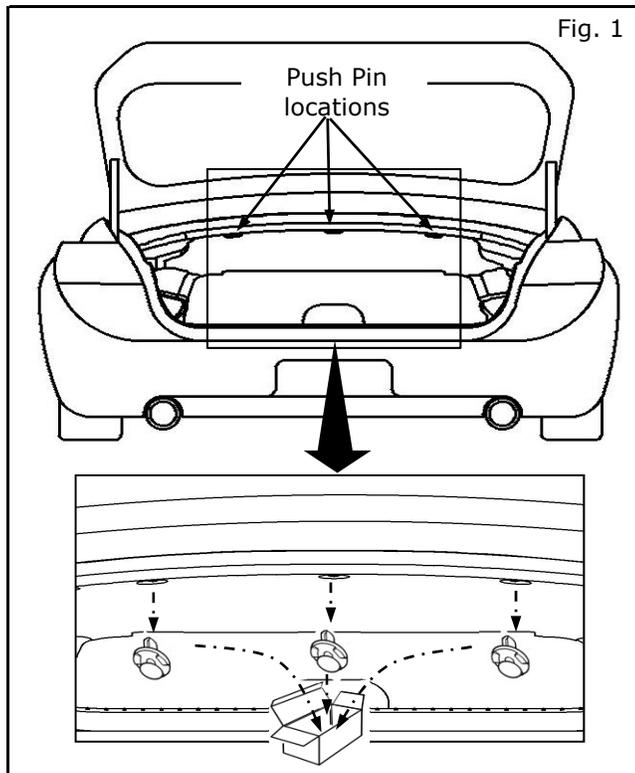

- 1) Remove (3) push pins from package shelf using a flat head screw driver and save to reuse.

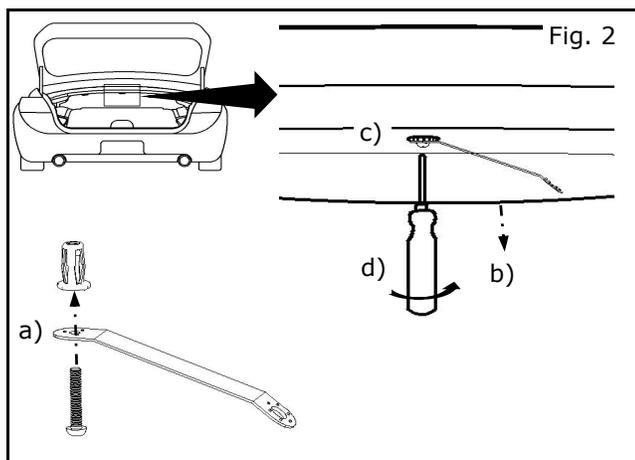


- 2) Attach Jack Nut to package shelf.
  - a) Feed screw through small hole in jack nut friction wrench and thread (hand tight) into jack nut.
  - b) Pull down trunk trim.
  - c) Insert jack nut/screw assembly into open middle push pin hole, keeping jack nut firmly pressed against sheet metal.
  - d) Use #2 Phillips screw driver and tighten screw in until jack nut is fully collapsed.
  - e) Remove screw from jack nut

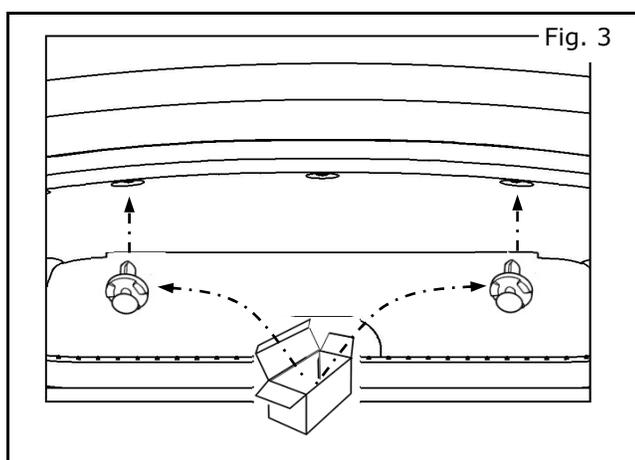


- 3) Push trunk trim back up, reinstall (2) outer push pins and discard 3rd push pin


## INSTALLATION PROCEDURE:

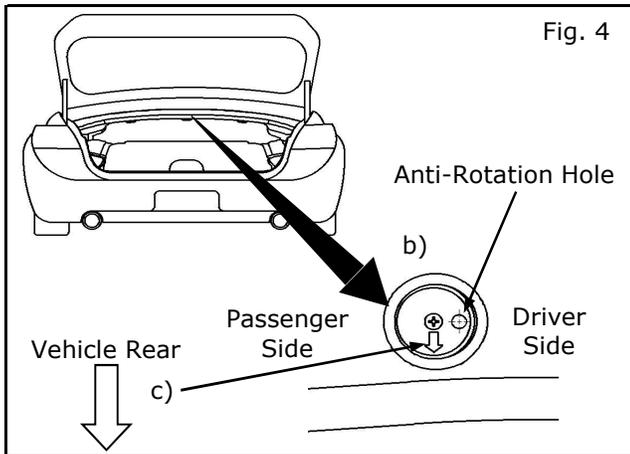

- 4) Align Drill Template.
  - a) Go to Page 5, make sure template is printed to scale and cut out drill template.
  - b) Poke hole in center of template and insert screw.
  - c) Thread screw/template through trunk trim and into jack nut.
  - d) Ensure that drill template arrow is pointing towards rear of vehicle and tighten screw to hold template in place.

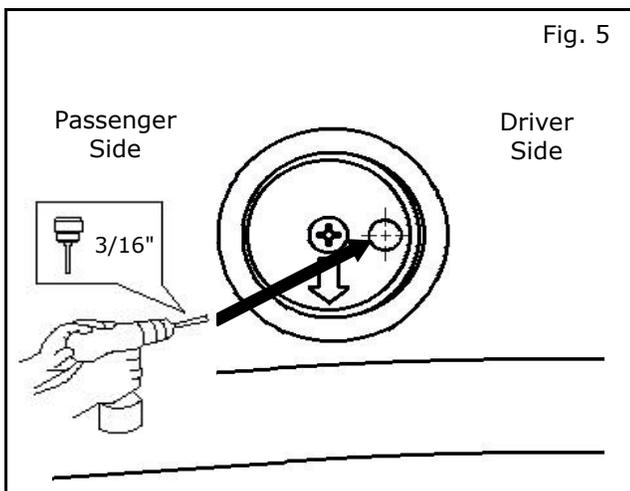


- 5) Mark center of anti-rotation hole with center punch/hammer.
- 6) Drill anti-rotation hole using 3/16" drill bit.
- 7) Remove screw and drill template.


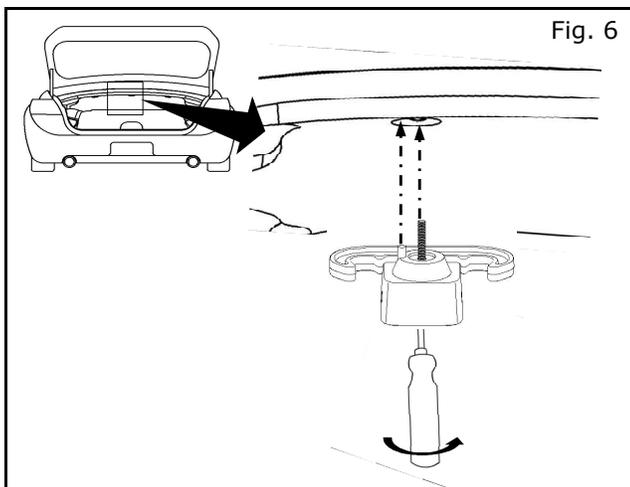


- 8) With shopping bag hook in stowed position, insert screw, align with jack nut and anti-rotation hole and fully tighten.

**INSTALLATION PROCEDURE:**

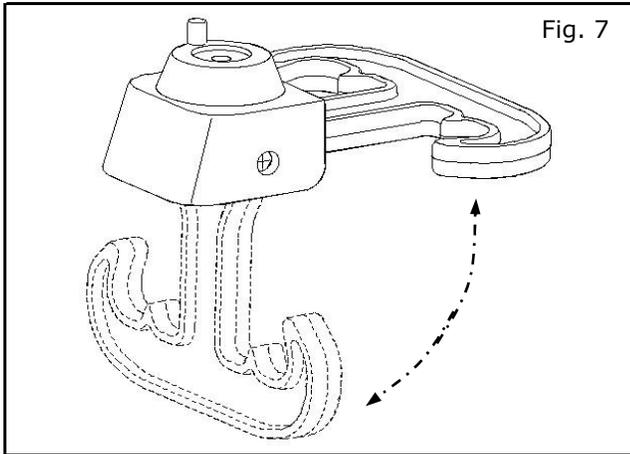

- 9) Shopping Bag Hook use: Move shopping bag hook into either "stowed" position (Fig. 8) or "down" position (Fig. 9). When not in use, place shopping bag hook in "stowed" position.

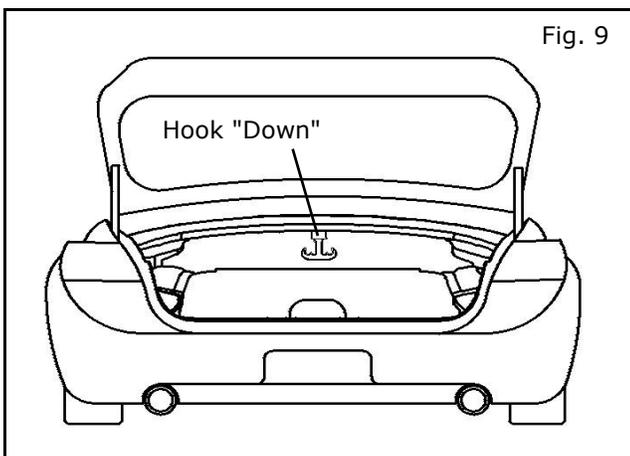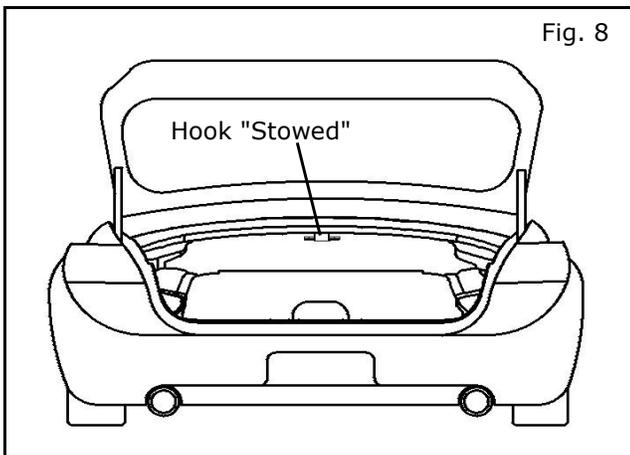

**DRILL TEMPLATE:**

