



INSTALLATION INSTRUCTIONS






1) **DESCRIPTION:** TRAILER BALL MOUNT

2) **APPLICATION:** SEE CHART BELOW

3) **PART NUMBER:**

VEHICLE APPLICATION	PART NUMBER	WEIGHT CAPACITY
PATHFINDER (2005-2012) TITAN (2004-LATER) NV FULL SIZE (2012-LATER)	999T5-XY100	5,000 LBS MAX.
PATHFINDER (2013-LATER) JX (2013) QX60 (2014-LATER) FRONTIER (2005-LATER)	999T5-BY100	5,000 LBS MAX.
XTERRA (2005-LATER)	999T5-KY100	5,000 LBS MAX.

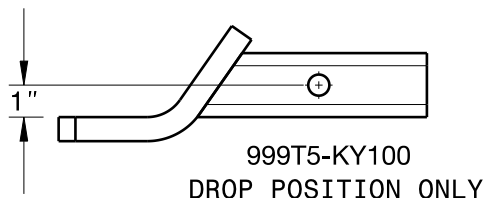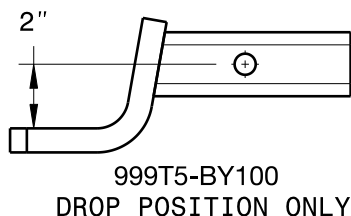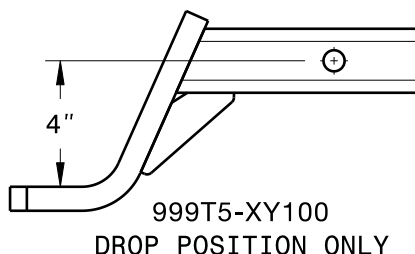

4) **KIT CONTENTS:**


QTY	DESCRIPTION	QTY	DESCRIPTION
1	BALL MOUNT	1	SAFETY PIN
1	RECEIVER HITCH PIN	1	BALL MOUNT BUSHING/WASHER KIT (999T5-BY100 & 999T5-KY100 KITS ONLY)

5) **TOOLS REQUIRED:** NONE

6) **INSTALLATION PRECAUTIONS / NOTES:**

CAUTION: VEHICLE TOWING CAPACITY MAY DIFFER FROM BALL MOUNT RATING. SEE OWNER'S MANUAL FOR VEHICLE TOWING CAPACITY. REMOVE BALL MOUNT FROM RECEIVER WHEN NOT TOWING.

7) **BALL MOUNT INSTALLATION**

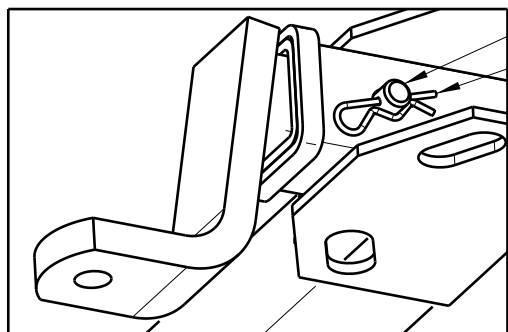

RECEIVER PIN
SAFETY PIN

INSTALL BALL MOUNT INTO RECEIVER & ATTACH USING RECEIVER PIN & SAFETY PIN. SEE THE ILLUSTRATIONS FOR PROPER INSTALLATION & ORIENTATION OF BALL MOUNT PER EACH VEHICLE APPLICATION.