

GENUINE PARTS




INSTALLATION INSTRUCTIONS

DESCRIPTION:	Cargo Net
APPLICATION:	QX60, Pathfinder
PART NUMBER:	999C1 RZ000

KIT CONTENTS:

Item	Qty.	Part Description
Α	1	Cargo Net
В	1	Installation Instructions





Α

TOOLS REQUIRED:

• No tools required


PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:

- Ensure that net is securely attached so items do not fall out during transit.
- Keep this installation instruction sheet with the Vehicle Owner's Manual for future reference.
- Max load not to exceed 30 lbs.

NOTE:

Take proper care installing the cargo net to the correct mounting locations, as shown. Using incorrect attachment locations could result in damage to the vehicle.

INSTALLATION PROCEDURE:

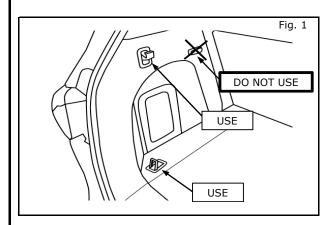


1) Locate 4 attachment points in cargo area (driver side shown).


NOTE:

- Do not use clip location as shown. Damage to the vehicle may occur.
- Position net so loops are toward top and hooks are toward bottom.


INSTALLATION PROCEDURE:

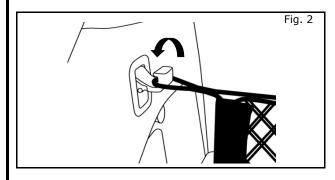

3) Attach net loops to upper hooks (driver side shown).

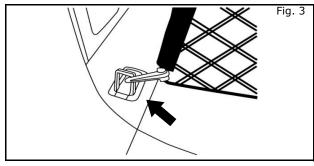

4) Attach net hooks to lower clips (driver side shown).

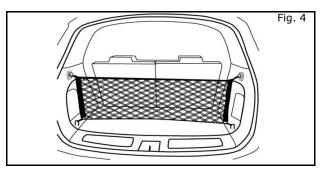

5) Installed cargo net shown.