





GENUINE PARTS

INSTALLATION INSTRUCTIONS

| | | |
|---------------------------------|-------------|---|
| DESCRIPTION: Trunk Net | | |
| APPLICATION: Q60 - Coupe | | |
| PART NUMBER: 999C1 JUC00 | | |
| KIT CONTENTS: | | |
| Item | Qty. | Part Description |
| A | 1 | Trunk Net |
| B | 1 | Installation Instruction Replacement Template |



A



B

TOOLS REQUIRED:

- No tools required

PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:

- Ensure that net is securely attached so items do not fall out during transit.
- Keep this installation instruction sheet with the Vehicle Owner's Manual for future reference.
- Max load not to exceed 30 lbs.

INSTALLATION PROCEDURE:

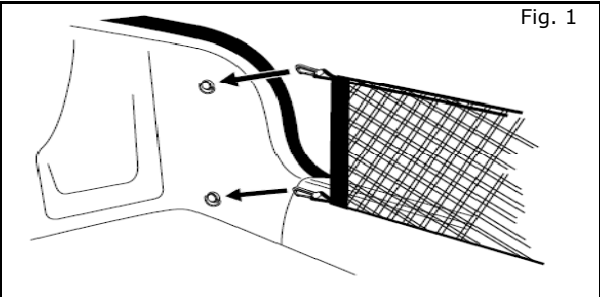


Fig. 1

- 1) Locate the 4 attachment points in trunk area.
- 2) Attach the cargo net hooks to the D-rings inside the trunk. (Passenger side shown).

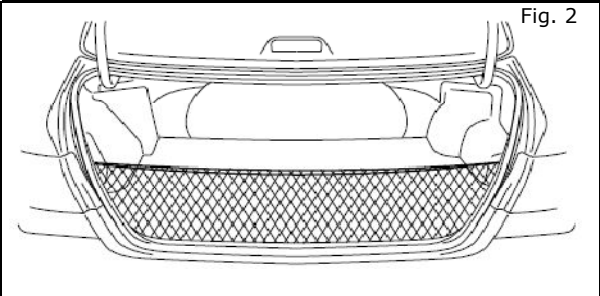


Fig. 2

- 3) Attach the trunk net hooks on the other side of the net, to the D-rings on the driver side of the trunk.