



GENUINE PARTS

INSTALLATION INSTRUCTIONS

DESCRIPTION: Fog Lamp Surround - Carbon Fiber

APPLICATION: Q60

PART NUMBER: T99J7 5CH1A

KIT CONTENTS:


Item	Qty.	Part Description
A	1	Carbon Fiber Fog Lamp Surround LH
B	1	Carbon Fiber Fog Lamp Surround RH
C	1	Installation Instruction Replacement Template



A



B

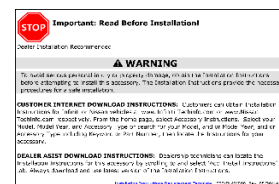

C





TOOLS REQUIRED:

- Trim Fiber Stick
- Trim hook
- Masking tape
- Safety glasses
- Protective gloves
- Soft cloth

PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:

- Dealer Installation Recommended. Instructions may refer to Service Manual.
- Installation requires special tool(s)

INSTALLATION PROCEDURE:

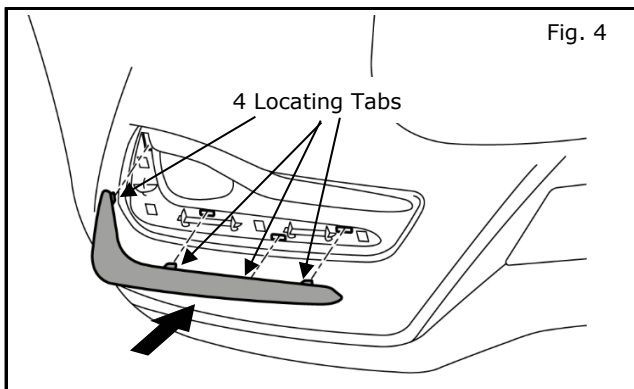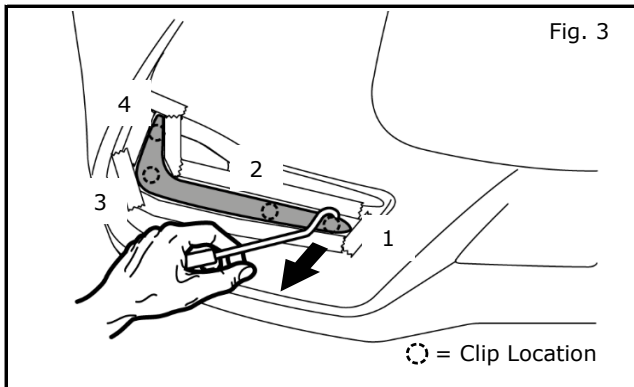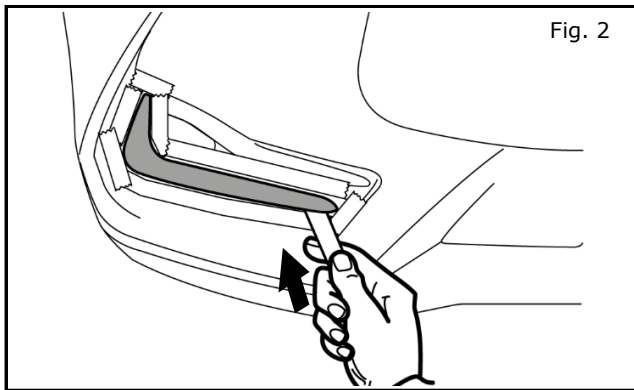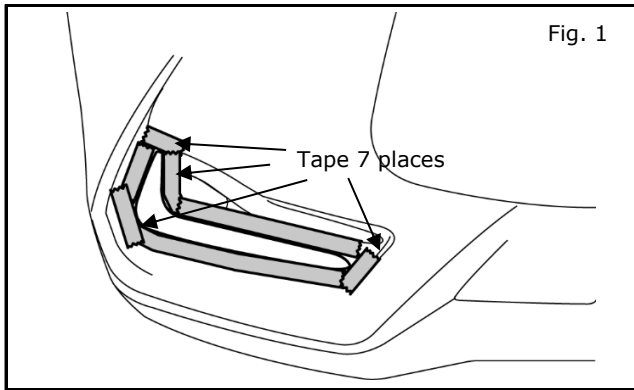

NOTE:

Wear safety glasses.

- 1) Apply masking tape to protect entire area around Fog Lamp Surround in 7 places see fig. 1.

- 2) Removing original accent.
 - a) Carefully insert the tip of a trim fiber stick in between the accent and surround as shown in Fig. 2.
 - b) Carefully push the fiber stick directly inwards - in direction of arrow - until both parts separate creating a small gap.

NOTE:

Do not pry or twist fiber stick against the surround otherwise damage may occur!

- c) Insert trim hook into the gap and ensure it is firmly engaged against the edge of the accent.
 - d) Carefully, but firmly, pull accent part - in direction of arrow - directly away from surround and disengage 4 attaching clips - starting at clip 1 through 4 and remove the accent.
- 3) Installing Carbon Fiber accent.
 - a) Insert Carbon Fiber accent locating tabs in matching holes on surround (4 places).
 - b) Push firmly on accent piece to engage retaining clips.
 - c) Gently buff Accent with a soft cloth if necessary.